

HT-BD8200

# 2.1CH Blu-ray Home Theater System user manual

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service,  
please register your product at  
[www.samsung.com/register](http://www.samsung.com/register)



# Key features of your new Blu-ray Home Theater

---

## PLAYER FEATURES

---

### **Playback of many disc types, plus an FM Tuner**

The HT-BD8200 allows you to play various discs, including BD-ROM, DVD-VIDEO, DVD-RW/-R(V mode), CD, MP3, JPEG, DivX, MKV, MP4 and CD-R/RW, with a sophisticated FM tuner, all in a single player.

### **Full HD Audio Decoding Support (DD,DD+,DOLBY TRUE-HD,DTS,DTS-HD HRA, DTS-HD MA Essential)**

Please refer to [www.DOLBY.COM](http://www.DOLBY.COM) and [DTS.COM](http://DTS.COM) for more detail.

### **TV Screen Saver Function**

If the main unit remains in stop mode for 5 minutes, the Screen Saver mode will start. The HT-BD8200 automatically switches itself into the power saving mode after 15 minutes in the Screen Saver mode.

### **Power Saving Function**

The HT-BD8200 automatically shuts itself off after 20 minutes in Stop mode.

### **USB Host support**

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Home Theater's USB HOST function.

### **HDMI**

HDMI transmits Blu-Ray/DVD video and audio signals simultaneously, and provides a clearer picture. The 1080p(Full HD) resolution provides even clearer pictures.

### **AV SYNC Function**

Video may lag behind the audio if the unit is connected to a digital TV. To compensate for this, you can adjust the audio delay time to sync up with the video.

### **Anynet+(HDMI-CEC) Function**

Anynet+ is a function that can be used to operate the main unit of this system using a Samsung TV remote control, by connecting the Blu-ray Home Theater to a SAMSUNG TV using an HDMI Cable. (This is only available with SAMSUNG TVs that support Anynet+.)



### **iPod & iPhone support**

You can enjoy music files by connecting your iPod to the home theater with the supplied iPod dock.

### **BD Wise**

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them. This feature is enabled only if BD Wise-compliant Samsung products are connected to each other using an HDMI cable.

### **Wireless Subwoofer**

You can hear powerful sound from the subwoofer without having to use speaker cables.

## BLU-RAY DISC FEATURES

Blu-ray Discs support the highest quality HD video available in the industry - Large capacity means no compromise on video quality. Furthermore, a Blu-ray Disc has the same familiar size and look as a DVD.

\* The following Blu-ray Disc features are disc dependant and will vary. Appearance and navigation of features will also vary from disc to disc. Not all discs will have the features described below.

### Video highlights

The BD-ROM format for movie distribution supports three highly advanced video codecs, including AVC, VC-1, and MPEG-2. HD video resolutions are also available:

- 1920 x 1080 HD
- 1280 x 720 HD

### For High-Definition Playback

To view high-definition contents on a Blu-ray disc, an HDTV (High Definition Television) is required. Some discs may require using the player's HDMI OUT to view high-definition content. The ability to view high-definition content on a Blu-ray disc may be limited depending on the resolution of your TV.

### Subtitles

Depending on what is contained on the Blu-ray Disc, you may be able to select different font styles, sizes and colors for the subtitles. Subtitles may also be animated, scrolled or faded in and out.

### BD-LIVE

You can use a Blu-ray Disc supporting BD-LIVE through a network connection to enjoy various contents provided by the disc manufacturer.

### BLOCKBUSTER

This Blue-ray Home Theater enables you to enjoy movies on-demand provided by Blockbuster through a network connection.

### NETFLIX

This Blue-ray Home Theater enables you to enjoy movies on-demand provided by Netflix through a network connection.


### PANDORA

This Blue-ray Home Theater enables you to enjoy Internet Radio provided by Pandora through a network connection.

© 2005-2009 Pandora Media, Inc., All Rights Reserved Pandora and the Music Genome Project are registered trademarks of Pandora Media, Inc.

### YouTube


This Blue-ray Home Theater enables you to enjoy videos on-demand provided by YouTube through a network connection.

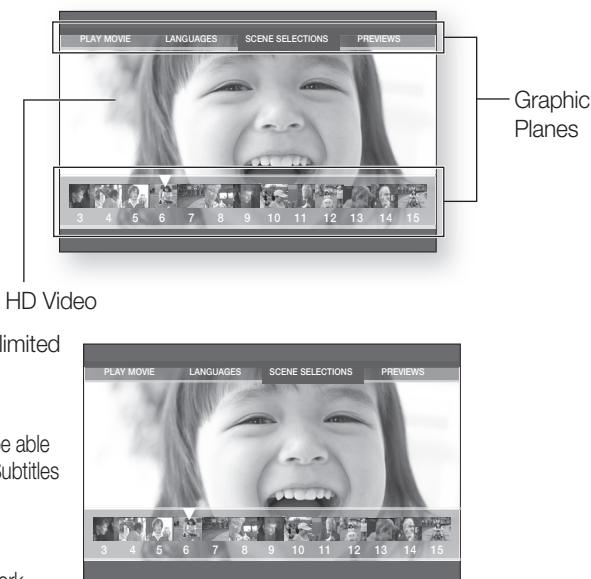

# Key features of your new Blu-ray Home Theater

## WHAT'S INCLUDED


Check for the supplied accessories below.

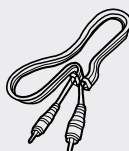


Video Cable  
(AH39-40001V)



FM Antenna  
(AH42-00017A)

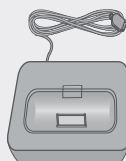

iPod Dock  
(AH96-00051A)



Cradle Stand  
(AH96-00074A)



Remote Control  
(AH59-02195C)  
/ Batteries (AAA size)  
(4301-000116)



User's Manual  
(AH68-02244R)




Main unit's wall mount bracket  
screws (M4 x L8, 4EA)  
(6003-000133)




Bracket Wall Mount (2EA)  
(AH61-02985A)/  
Bracket Set Mount (2EA)  
(AH61-02984A)



Wall Mount Sheet  
(AH63-02018A)



Toroidal Ferrite Core  
(3301-000144)





Wireless LAN Adapter  
(AK98-01080A)  
/ Wireless LAN Adapter Gender  
(AK96-01050A)



# Safety information

## SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <b>CAUTION</b>              RISK OF ELECTRIC SHOCK              DO NOT OPEN         </div>	
<p>The lightning flash and Arrowhead within Triangle Is a warning sign alerting you of dangerous voltage inside the product</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The explanation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>

**CLASS 1 LASER PRODUCT**  
**KLASSE 1 LASER PRODUKT**  
**LUOKAN 1 LASER LAITE**  
**KLASS 1 LASER APPARAT**  
**PRODUCTO LASER CLASE 1**

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

#### DANGER :

- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.  
 AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)

#### CAUTION :

- CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.  
 AVOID EXPOSURE TO THE BEAM (IEC 60825-1)
- THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

#### WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

#### CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

#### FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : FCC regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.



### Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.


- 1) Read these instructions.
- 2) Keep these Instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachment/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




# PRECAUTIONS

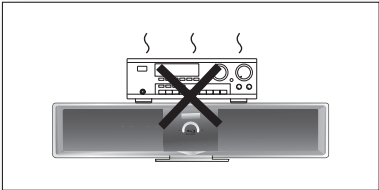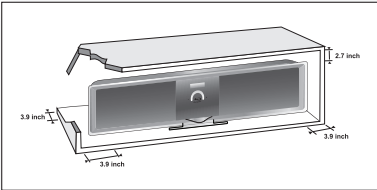


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4 inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the Disc Insert slot is empty. This player is designed for continuous use. Switching off the Blu-ray Home Theater to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

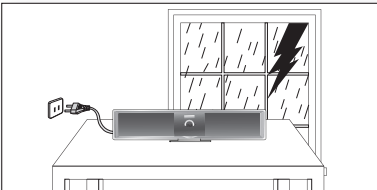

During thunderstorms, disconnect the AC main plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

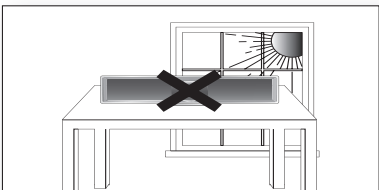


Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

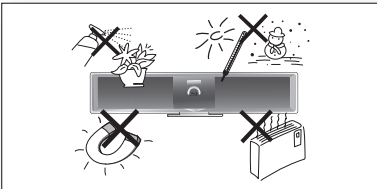

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

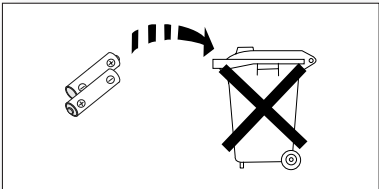

The batteries used with this product contain chemicals that are harmful to the environment.  
Do not dispose of batteries in the general household trash.



Do not upside down the assembled stand and main unit by holding the stand, otherwise the main unit may fall apart from the stand and it may cause product damage or personal injury.

## This product is covered by one or more of the following U.S. patents:

5,060,220	5,457,669	5,561,649	5,705,762	6,043,912	6,438,099	6,467,061	6,556,521	6,578,163	6,697,307	6,728,474
6,771,891	6,894,963	6,895,593	6,937,815	6,996,327	7,009,926	7,085,221	7,088,649	7,092,327	7,099,566	7,123,564
7,142,493	7,142,495	7,145,861	7,146,624	7,151,729	7,161,879	7,164,647	7,167,437	7,173,891	7,177,250	7,194,187
7,203,891	7,209,423	7,210,067	7,228,062	7,245,566	7,245,567	7,257,065	7,263,045	7,269,110	7,272,086	7,272,106
7,280,460	7,283,729	7,286,454	7,304,938							

"This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited."

# Contents

## KEY FEATURES OF YOUR NEW BLU-RAY HOME THEATER

2

- 2 Player Features
- 3 Blu-ray Disc Features
- 4 What's Included

## SAFETY INFORMATION

5

- 5 Safety Warnings
- 6 Precautions

## GETTING STARTED

10

- 10 Before Reading the User's Manual
- 11 Disc Type and Characteristics

## DESCRIPTION

14

- 14 Front Panel
- 15 Rear Panel

## REMOTE CONTROL

16

- 16 Tour of the Remote Control
- 18 Setting the Remote Control

## CONNECTIONS

20

- 20 Connecting the Wireless Subwoofer
- 21 Installing the Cradle Stand
- 21 Installing the Wall Mount
- 22 Connecting the Video Out to Your TV
- 24 Connecting an iPod
- 26 Connecting Audio from External Components
- 28 Connecting to the Network
- 30 Connecting the FM Antenna
- 30 Cooling Fan
- 30 Attaching the Toroidal Ferrite Core to the Power Cord of the Main Unit

## BASIC FUNCTIONS OF YOUR BLU-RAY HOME THEATER

31

- 31 Before Playing
- 32 On-Screen Menu Navigation
- 32 Playing a Disc
- 33 Setting the Sound
- 33 Using the Search and Skip Functions
- 34 Slow Motion Play/Step Motion Play

## SYSTEM SETUP

35

- 35 Setting the Clock

## LANGUAGE SETUP

36

- 36 Setting up the Language Options

# Contents

---

<b>AUDIO SETUP</b> 37	37 Setting up the Speaker Options
<b>DISPLAY SETUP</b> 40	40 Setting up the Display Options 42 Setting up the Video Display/Output Options
<b>HDMI SETUP</b> 44	44 Setting up the HDMI Setup Options
<b>PARENTAL SETUP</b> 47	47 Setting up the Parental Lock
<b>NETWORK SETUP</b> 49	49 Setting up the Network Setup Options
<b>BD DATA MANAGEMENT</b> 54	54 System Device Management
<b>SYSTEM UPGRADE</b> 55	55 Firmware Upgrade 57 System Information 57 Firmware Upgrade Notification 57 DivX(R) Registration 57 DivX(R) Deactivation
<b>WATCHING A MOVIE</b> 58	58 Using the Display Function 59 Using the Disc Menu & Popup/Title Menu 60 Repeat Play 61 Selecting the Audio Language 61 Selecting the Subtitle Language 62 Changing the Camera Angle 63 PIP (Picture In Picture) Settings 63 BD-LIVE™ 64 DivX, MKV, MP4 Playback

**LISTENING TO MUSIC**

66

- 66 Buttons on the Remote Control Used for Audio CD(CD-DA)/ MP3 Disc Playback
- 66 Repeat Audio CD(CD-DA) & MP3
- 67 Playing an Audio CD(CD-DA)/MP3

**VIEWING A PICTURE**

69

- 69 Viewing a Picture
- 69 Slide Show/Speed
- 69 Rotate
- 70 Zoom
- 70 Go To Photo List

**USING THE USB FUNCTION**

71

- 71 Playing Media Files Using the USB Host Feature

**RADIO**

73

- 73 Listening to Radio
- 73 Presetting Stations

**USING AN iPod**

74

- 74 Listening to Music
- 76 Watching a Movie

**PC STREAMING FUNCTION**

77

- 77 Connecting to a Pc and Playing MP3, JPEG, DIVX, MKV and MP4 Content

**USING THE E-CONTENTS**

79

- 79 Using Blockbuster
- 80 Using Netflix
- 82 Using Pandora
- 84 Using YouTube

**CONVENIENT FUNCTION**

89

- 89 Sleep Timer Function
- 89 Adjusting Display Brightness
- 89 Mute Function

**TROUBLESHOOTING**

90

**APPENDIX**

92














- 92 Cautions on Handling and Storing Discs
- 93 Specifications

# Getting started

## BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

### Icons that will be used in manual

Icon	Term	Definition
	BD-ROM	This involves a function available on a BD-ROM.
	BD-RE	This involves a function available on the BD-RE.
	BD-R	This involves a function available on the BD-R.
	DVD-VIDEO	This involves a function available on DVD-Video or DVD-RW/-R discs that have been recorded and finalized in Video Mode.
	DVD-RW	This involves a function available on DVD-RW. (V mode and finalized only)
	DVD-R	This involves a function available on DVD-R. (V mode and finalized only)
	Audio CD	This involves a function available on an audio CD-RW/CD-R (CD-DA format).
	MP3	This involves a function available on DVD-RW/-R, CD-RW/CD-R discs and USB storage devices.
	JPEG	This involves a function available on DVD-RW/-R, CD-RW/CD-R discs and USB storage devices.
	DivX, MKV, MP4	This involves a function available on DVD-RW/-R, CD-RW/CD-R discs and USB storage devices.
	USB storage device	This involves a function available on USB storage device.
	Caution	This involves a case where a function does not operate or settings may be cancelled.
	Note	This involves tips or instructions on the page that help each function operate.

### About the use of this user's manual

- 1) Be sure to be familiar with Safety Information before using this product. (See pages 5~6)
- 2) If a problem occurs, check the Troubleshooting. (See pages 90 ~91)







### Copyright

©2009 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.












## DISC TYPE AND CHARACTERISTICS

### Disc types that can be played

Disc Types	Disc Logo	Recorded content	Disc Shape	Max. Playing minute
BD-ROM BD-RE/BD-R		AUDIO + VIDEO	Single sided	Playing time depends on the Title
DVD-VIDEO		AUDIO + VIDEO	Single sided(5 inches)	240
			Double sided(5 inches)	480
			Single sided(3 1/2 inches)	80
			Double sided(3 1/2 inches)	160
AUDIO-CD		AUDIO	Single sided(5 inches)	74
			Single sided(3 1/2 inches)	20
DivX		AUDIO + VIDEO	5 inches	—
			3 1/2 inches	—
DVD-RW (V mode and finalized only)		AUDIO + VIDEO	5 inches (4.7GB)	480 (EX : Extended Play)
DVD-R (V mode and finalized only)		AUDIO + VIDEO	5 inches (4.7GB)	480 (EX : Extended Play)

- This player is compatible with the NTSC color system only.
- PAL discs will not play.

### Logos of Discs that can be played

				
Blu-ray Disc	Dolby Digital Plus	DTS-HD High Resolution Audio		
				
NTSC broadcast system in U.S.A, Canada, Korea, Japan	Dolby TrueHD	DTS-HD Master Audio   Essential		
				
Digital Audio	MP3	Stereo	Java	BD-LIVE



- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio | Essential are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

# Getting started

## Discs that cannot be played

- HD DVD Disc
- DVD-RAM
- 3.9 GB DVD-R Disc for Authoring.
- DVD-RW(VR mode)
- DVD-ROM/PD/MV-Disc, etc
- CVD/CD-ROM/CDV/CD-G/CD-I/LD
- 3 1/2 inch MD (mini disc)



- Some commercial discs and DVD discs purchased outside your region may not be playable with this product. When these discs are played, either "No disc." or "Please check the regional code of the disc." will be displayed.
- If a DVD-R/-RW disc has not been recorded properly in DVD video format, it will not be playable.

## Region code

Both the Blu-ray Home Theater and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play. The Region Number for this Blu-ray Home Theater is described on the rear panel of the Blu-ray Home Theater.

BD Region Code	Area
A	North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia.
B	Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.
C	India, China, Russia, Central and South Asia.

DVD-Video Region Code	Area	DVD-Video Region Code	Area
1	USA, Canada	6	China
2	Japan, Europe, South Africa, Middle East, Greenland	7	Unspecified Special Use
3	Korea, Taiwan, Hong Kong, parts of South East Asia	8	Airlines/Cruise Ships (including Mexico)
4	Australia, New Zealand, Latin America (including Mexico)	9	Region free
5	Eastern Europe, Russia, India, Africa		

## Blu-ray Disc Compatibility

Blu-ray Disc is a new and evolving format. Accordingly, disc compatibility issues are possible. Not all discs are compatible and not every disc will play back. For additional information, refer to the Disc Type section of this Manual. If you encounter compatibility problems, please contact the SAMSUNG customer care center at 1-800 SAMSUNG.



- Playback may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched. Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for playback.
- Discs with PAL programs recorded on them cannot be played using this product.
- When a BD-Java title is played, loading may take longer than a normal title, or some functions may perform slowly.



## Disc Types

### ❖ BD-RE/BD-R

Blu-ray Disc Rewritable/Blu-ray Disc Recordable. BD-RE/BD-R is the ideal format for making backups, or recording personal video.

### ❖ BD-ROM

Blu-ray Disc Read Only Memory. A BD-ROM disc contains pre-recorded data. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format, for playback on Blu-ray Home Theaters. This unit can play back pre-recorded commercial BD-ROM discs.

### ❖ DVD-Video

- A digital versatile disc (DVD) can contain up to 135-minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby Digital surround, allowing you to enjoy vivid and clear theatre quality images.
- When switching from the first layer to the second layer of a dual-layered DVD Video disc, there may be momentary distortion in the image and sound. This is not a malfunction of the unit.
- Once a DVD-RW/-R recorded in Video Mode is finalized, it becomes DVD-Video. Pre-recorded (pre-stamped) commercial DVDs with movies are also referred to as DVD-Videos. This unit can play back pre-recorded commercial DVD discs (DVD-Video discs) with movies.

### ❖ Audio CD

- An audio disc on which 44.1kHz PCM Audio is recorded.
- This unit can play back CD-DA format audio CD-R and CD-RW discs.
- The unit may not be able to play some CD-R or CD-RW discs due to the condition of the recording.

### ❖ CD-R/-RW

- Use a 700MB(80 minutes) CD-R/-RW disc. If possible, do not use a 800MB(90 minutes) or above disc, as the disc may not play back.
- If the CD-R/-RW disc was not recorded as a closed session, you may experience delays when playing back the beginning of the disc or all recorded files may not play.
- Some CD-R/-RW discs may not be playable with this unit, depending on the device which was used to burn them. For contents recorded on CD-R/-RW media from CDs for your personal use, playability may vary depending on contents and discs.

### ❖ DVD-R Disc Playback

- Once a DVD-R recorded in Video Mode is finalized, it becomes DVD-Video.
- This unit can play back DVD-R discs recorded and finalized with a Samsung DVD video recorder. It may not be able to play some DVD-R discs depending on the disc and the condition of the recording.

### ❖ DVD-RW Disc Playback

- Playback can be performed with DVD-RW discs in the Video Mode and finalized only.
- Once a DVD-RW recorded in Video Mode is finalized, it becomes DVD-Video. Ability to play back may depend on recording conditions.

## Disc Format

### ❖ Using MP3 disc

- CD-R/-RW, DVD-RW/-R recorded with UDF, ISO9660 or JOLIET format can be played back.
- Only MP3 files with the ".mp3" or ".MP3" extension can be played.
- Playable bit-rate range is from 56 Kbps to 320 Kbps.
- Playable sample-rate is 32KHz to 48KHz.
- The unit can handle a maximum of 1500 files and folders under a parent folder. For MP3 files recorded with a VBR(Variable Bit Rates), the sound may cut in and out.

### ❖ Using JPEG disc


- CD-R/-RW, DVD-RW/-R recorded with UDF, ISO9660 or JOLIET format can be played back.
- Only JPEG files with the ".jpg", ".JPG", ".jpeg" or "JPEG" extension can be displayed.
- Progressive JPEG is supported.

### ❖ DVD-RW/-R (V)

- This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by this Blu-ray Home Theater once it has been finalized.
- If a disc that has been recorded in Video Mode by a different maker's recorder but has not been finalized, it cannot be played by this Blu-ray Home Theater.


# Description

## FRONT PANEL

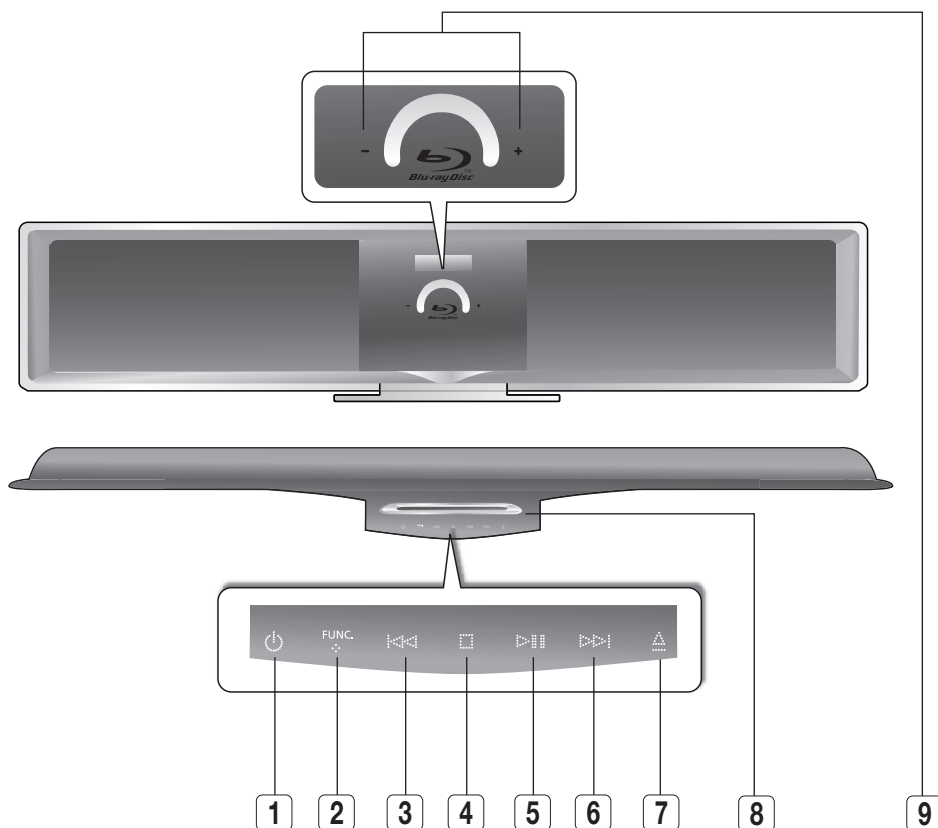

<b>1</b>	<b>POWER BUTTON</b>	Turns the Blu-ray Home Theater on and off.
<b>2</b>	<b>FUNCTION BUTTON</b>	The mode switches as follows : BD/DVD → DIGITAL → AUX → TUNER.
<b>3</b>	<b>TUNING DOWN &amp; SKIP (◀◀) BUTTON</b>	Goes back to the previous title/chapter/track. Tunes down the FM frequency band.
<b>4</b>	<b>STOP BUTTON</b>	Stops disc playback.
<b>5</b>	<b>PLAY/PAUSE BUTTON</b>	Plays a disc or pauses playback.
<b>6</b>	<b>TUNING UP &amp; SKIP (▶▶) BUTTON</b>	Goes to the next title/chapter/track. Tunes up the FM frequency band.
<b>7</b>	<b>OPEN/CLOSE BUTTON</b>	Ejects a disc.
<b>8</b>	<b>DISC SLOT</b>	Insert disc here.
<b>9</b>	<b>Volume Control BUTTON</b>	Volume adjustment.

## REAR PANEL

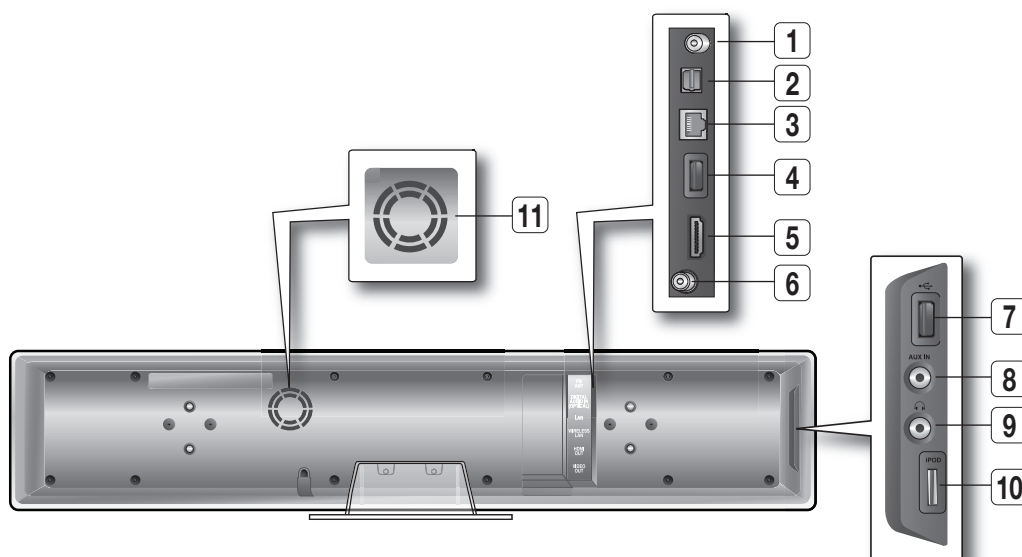


<b>1</b>	<b>FM 75Ω COAXIAL JACK</b>	Connect the FM antenna.
<b>2</b>	<b>EXTERNAL DIGITAL OPTICAL INPUT JACK</b>	Use this to connect external equipment capable of digital output.
<b>3</b>	<b>LAN TERMINAL</b>	Can be used for connection to BD-LIVE, Blockbuster, Netflix, Pandora and YouTube. It can be also used for firmware upgrades.
<b>4</b>	<b>WIRELESS LAN JACK</b>	A USB storage device can be connected here and used as storage when connected to BD-LIVE. It can also be used for firmware upgrades and MP3/JPEG/DivX/MKV/MP4 playback, as well as for connecting to BD-Live with a wireless LAN adapter.
<b>5</b>	<b>HDMI OUT JACK</b>	Using an HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.
<b>6</b>	<b>VIDEO OUT JACK</b>	Connect your TV's Video Input jack (VIDEO IN) to the VIDEO OUT Jack on this unit.
<b>7</b>	<b>USB HOST</b>	A USB storage device can be connected here and used as storage when connected to BD-LIVE. It can also be used for firmware upgrades and MP3/JPEG/DivX/MKV/MP4 playback.
<b>8</b>	<b>AUX IN JACK</b>	Connect to the 2CH analog output of an external device (such as a VCR)
<b>9</b>	<b>HEADPHONE JACK</b>	Connect headphones.
<b>10</b>	<b>iPod JACK</b>	Connect the iPod dock connector here.
<b>11</b>	<b>COOLING FAN</b>	The fan always revolves when the power is on. Ensure a minimum of 4 inches of clear space on all sides of the fan when installing the product.






■ A USB HDD device cannot be used for BD Data storage (BD-LIVE).


# Remote control
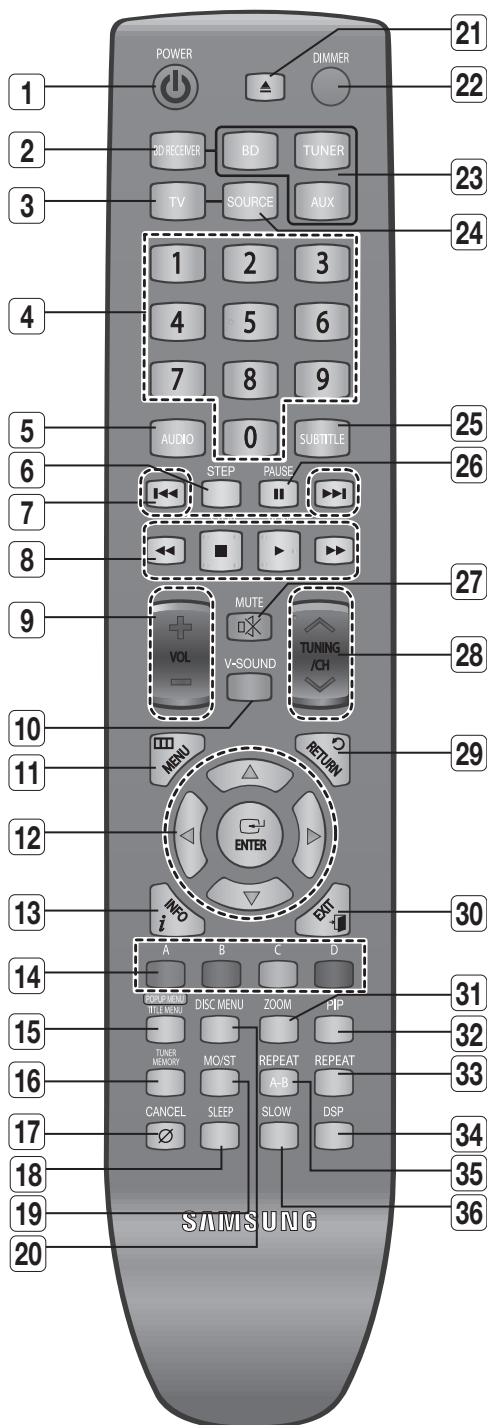
## TOUR OF THE REMOTE CONTROL



<b>1</b>	POWER button	<b>19</b>	MO/ST button	
<b>2</b>	BD RECEIVER button	<b>20</b>	DISC MENU button	
<b>3</b>	TV button	<b>21</b>	OPEN/CLOSE button	
<b>4</b>	Number (0~9) buttons	<b>22</b>	DIMMER button	
<b>5</b>	AUDIO button	 BD button  TUNER button  AUX button		
<b>6</b>	STEP button		<b>23</b>	
<b>7</b>	Tuning Preset/CD Skip buttons		<b>24</b>	SOURCE button
<b>8</b>	 PLAY button	<b>25</b>	SUBTITLE button	
	 STOP button	<b>26</b>	PAUSE button	
	 SEARCH buttons	<b>27</b>	MUTE button	
<b>9</b>	VOLUME button	<b>28</b>	TUNING/CH button	
<b>10</b>	V-SOUND button	<b>29</b>	RETURN button	
<b>11</b>	MENU button	<b>30</b>	EXIT button	
<b>12</b>	Cursor/ENTER button	<b>31</b>	ZOOM button (JPEG Only)	
<b>13</b>	INFO button	<b>32</b>	PIP button	
<b>14</b>	COLOR Buttons : RED(A), GREEN (B), YELLOW(C), BLUE(D)	<b>33</b>	REPEAT button	
<b>15</b>	POPOP MENU, TITLE MENU button	<b>34</b>	DSP button	
<b>16</b>	TUNER MEMORY button	<b>35</b>	REPEAT A-B button	
<b>17</b>	CANCEL button	<b>36</b>	SLOW button	
<b>18</b>	SLEEP button			

### Installing batteries in the Remote Control

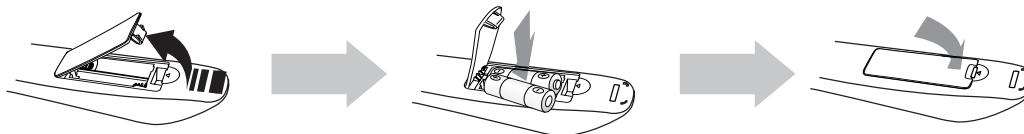

**1. Lift the cover at the back of the remote control upward as shown.**

**2. Install two AAA size batteries.**  
Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

**3. Replace the cover.**  
Assuming typical TV usage, the batteries last for about one year.

# Remote control

## SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

### When operating a TV with the remote control


1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.

- If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

#### Example : For a Samsung TV

While holding down the **POWER** button, use the **number** buttons to enter 00, 15, 16, 17 and 40.


4. If the TV turns off, the setting is complete.
- You can use the TV **POWER**, **VOLUME**, **CHANNEL**, and **Numeric** buttons (0~9).

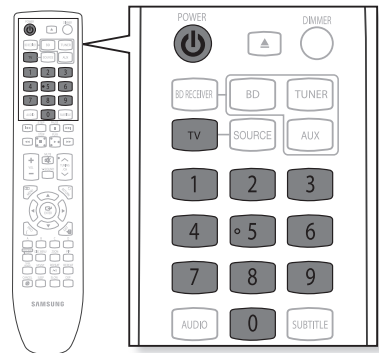

- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.

## Operation Range of the Remote Control

The remote control can be used up to approximately 23 feet (7 meters) in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

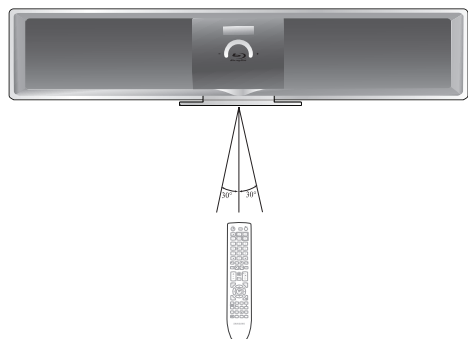

## TV Brand Code List

No.	Brand	Code	No.	Brand	Code
1	Admiral (M.Wards)	56, 57, 58	44	MTC	18
2	A Mark	01, 15	45	NEC	18, 19, 20, 40, 59, 60
3	Anam	01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14	46	Nikei	03
4	AOC	01, 18, 40, 48	47	Onking	03
5	Bell & Howell (M.Wards)	57, 58, 81	48	Onwa	03
6	Brocsonic	59, 60	49	Panasonic	06, 07, 08, 09, 54, 66, 67, 73, 74
7	Candle	18	50	Penney	18
8	Cetronic	03	51	Philco	03, 15, 17, 18, 48, 54, 59, 62, 69, 90
9	Citizen	03, 18, 25	52	Philips	15, 17, 18, 40, 48, 54, 62, 72
10	Cinema	97	53	Pioneer	63, 66, 80, 91
11	Classic	03	54	Portland	15, 18, 59
12	Concerto	18	55	Proton	40
13	Contec	46	56	Quasar	06, 66, 67
14	Coronado	15	57	Radio Shack	17, 48, 56, 60, 61, 75
15	Craig	03, 05, 61, 82, 83, 84	58	RCA/Proscan	18, 59, 67, 76, 77, 78, 92, 93, 94
16	Croslex	62	59	Realistic	03, 19
17	Crown	03	60	Sampo	40
18	Curtis Mates	59, 61, 63	61	Samsung	00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98
19	CXC	03	62	Sanyo	19, 61, 65
20	Daewoo	02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90	63	Scott	03, 40, 60, 61
21	Daytron	40	64	Sears	15, 18, 19
22	Dynasty	03	65	Sharp	15, 57, 64
23	Emerson	03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85	66	Signature 2000 (M.Wards)	57, 58
24	Fisher	19, 65	67	Sony	50, 51, 52, 53, 55
25	Funai	03	68	Soundesign	03, 40
26	Futuretech	03	69	Spectricon	01
27	General Electric (GE)	06, 40, 56, 59, 66, 67, 68	70	SSS	18
28	Hall Mark	40	71	Sylvania	18, 40, 48, 54, 59, 60, 62
29	Hitachi	15, 18, 50, 59, 69	72	Symphonic	61, 95, 96
30	Inkel	45	73	Tatung	06
31	JC Penny	56, 59, 67, 86	74	Techwood	18
32	JVC	70	75	Teknika	03, 15, 18, 25
33	KTV	59, 61, 87, 88	76	TMK	18, 40
34	KEC	03, 15, 40	77	Toshiba	19, 57, 63, 71
35	KMC	15	78	Vidtech	18
36	LG (Goldstar)	01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44	79	Videch	59, 60, 69
37	Luxman	18	80	Wards	15, 17, 18, 40, 48, 54, 60, 64
38	LXI (Sears)	19, 54, 56, 59, 60, 62, 63, 65, 71	81	Yamaha	18
39	Magnavox	15, 17, 18, 48, 54, 59, 60, 62, 72, 89	82	York	40
40	Marantz	40, 54	83	Yupiteru	03
41	Matsui	54	84	Zenith	58, 79
42	MGA	18, 40	85	Zonda	01
43	Mitsubishi/MGA	18, 40, 59, 60, 75	86	Dongyang	03, 54


# Connections

This section involves various methods of connecting the Blu-ray Home Theater to other external components. Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

## CONNECTING THE WIRELESS SUBWOOFER

The Subwoofer's linking ID is preset at the factory and the main unit and sub should link (connect wirelessly) automatically when turned on. If the link indicator does not light when main unit and subwoofer are turned on, please set the ID by following the process below.

1. Plug the power cords of the main unit and subwoofer into the AC power supply.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 3 seconds.
  - The STANDBY indicator is turned off and the LINK indicator (blue LED) blinks quickly.

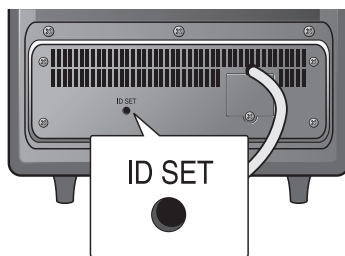


<The rear of the Subwoofer>



<The top of the Subwoofer>

3. In stand-by mode while the main unit is off, press the **0, 1, 3, 5** buttons in order.
  - The main unit's red stand-by LED flashes white and turns red again.
4. Press the **POWER** button to turn on the main unit.
  - The main unit and the subwoofer are now linked (connected).
  - The Link indicator (blue LED) on the subwoofer is turned on.

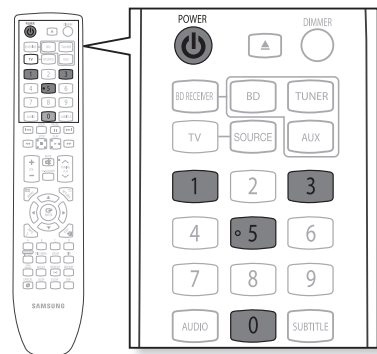

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will be in the standby mode and the STANDBY LED on the upper side will blink.
- If you use a device such as a microwave oven, wireless LAN Card, Bluetooth equipment, or any other device that uses the same frequency (2.4GHz) near the system, some sound interruption may be heard due to interference.
- The transmission distance of the wireless signal between the main unit and sub is about 33 ft., but may vary depending on your operating environment. If a steel-concrete or metallic wall is between main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make wireless connection, follow steps 1-4 above to retry the connection between the main unit and wireless subwoofer.



- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.




## INSTALLING THE CRADLE STAND

You can use the cradle stand to install this unit on a shelf. Make sure you place the unit on a flat surface.


### Connecting

Face the **FRONT** mark on the stand forward and slide the stand into the bottom of the unit until you hear a click.

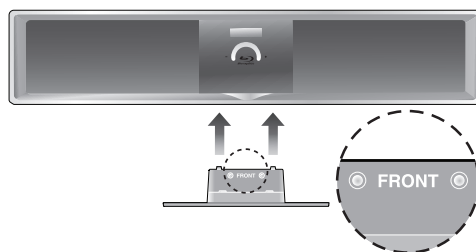

## INSTALLING THE WALL MOUNT

1. Disconnect the cradle stand from the unit.
2. Peel off the film from the double-sided adhesive sheet for the wall mount and attach it on a clean wall.
3. Secure the wall mount bracket using 6 screws (not supplied) while aligning holes marked on the sheet.
4. Attach the back unit bracket(bracket set mount) with the Home Theater unit by fastening provided 4 screws.
5. Fully insert the back bracket's clasp into the wall mount bracket's receptacle and fix it by fully sliding to the right.
  - Installation completed.

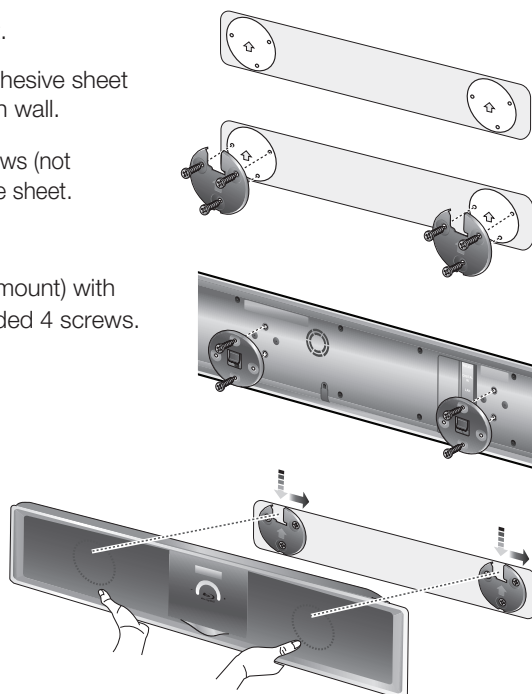

- Do not install on a place other than a vertical wall.
- When installing, avoid locations with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the strength of the wall is insufficient for the product installation, make sure to reinforce the wall before the installation.
- Check the material of the wall. If the wall is made of plaster board, marble, or iron board, purchase and use the appropriate fixing screws.
- Cables connecting to external devices are to be connected to the unit before installing.
- Be sure to turn off the unit before installation. Otherwise, it may cause electric shock.
- Do not turn the assembled cradle stand and main unit upside down, as the main unit may fall from the stand and cause product damage or personal injury.




- Do not hang onto the installed unit and avoid any impact to the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may result in an injury or damage to the product.
- When the unit is installed on a wall, please make sure that a child does not pull any of connecting cables, as it may cause it to fall.

# Connections

## CONNECTING THE VIDEO OUT TO YOUR TV

Choose one of the two methods for connecting to a TV.

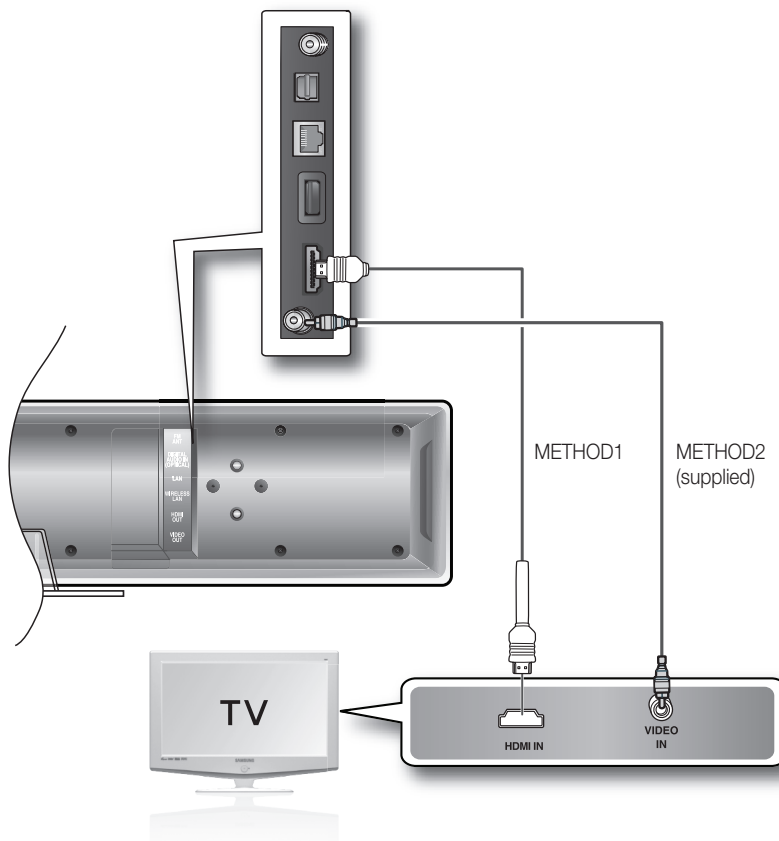

### METHOD 1 : HDMI (BEST)

Connect the HDMI cable (not supplied) from the HDMI OUT jack on the back of the Blu-ray Home Theater to the HDMI IN jack on your TV.



- Depending on your TV, certain HDMI output resolutions may not work.
- If an HDMI cable is connected from the player to a TV, the Blu-ray Home Theater's output is set to HDMI automatically within 10 seconds.
- When you connect the player to the TV using the HDMI cable for the first time or to a new TV, the HDMI output resolution will automatically be set to the highest provided by the TV.
- If you connect a Samsung TV to the Blu-ray Home Theater using an HDMI cable, the player can be easily operated using the TV remote control. (This is only available with Samsung TVs that support the Anynet+ feature.) (See page 44)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI) on your Blu-ray Home Theater.  
See your TV owner's manual for more information on how to select the TV's Video Input source.

## HDMI Auto Detection Function

The player's video output will automatically change to HDMI mode when connecting an HDMI cable while power is on. For possible HDMI resolutions, see page 41.

- **HDMI (High Definition Multimedia Interface)**

HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.

Using HDMI, the Blu-ray Home Theater transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.

- **HDMI connection description**

HDMI connector - Supports video and digital audio data.

- HDMI outputs only a pure digital signal to the TV.

- If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.

- **Why does Samsung use HDMI?**

Analog TVs require an analog video/audio signal. However, when playing a BD/DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter (in the Blu-ray Home Theater) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.

- **What is the HDCP?**

HDCP (High-band width Digital Content Protection) is a system for protecting BD/DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD, etc) and a display device (TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

- **What is Anynet+?**

Anynet+ is a convenient function that offers linked operation of this unit through Samsung TVs with the Anynet+ feature.

- If your Samsung TV has an *Anynet+* logo, then it supports the Anynet+ function.

- If you turn on the player and insert a disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.

- If you turn on the player and press the **PLAY** button with a disc already inserted, the TV will immediately turn on and switch to HDMI mode.

- **What is BD Wise?**

BD Wise is Samsung's latest inter-connectivity feature.

- When you connect Samsung products with BD-Wise to each other via HDMI, the optimum resolution will be set automatically.

## METHOD 2 : Composite Video (GOOD)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the Blu-ray Home Theater to the VIDEO IN jack on your TV.



- The VIDEO source is always output in 480i resolution regardless of the resolution set in the SETUP menu. (See page 42)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (Composite) on your Blu-ray Home Theater.  
See your TV owner's manual for more information on how to select the TV's Video Input source.
- Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.


# Connections

---

## CONNECTING AN iPod

---

You can enjoy music and video files from an iPod through the main unit. For iPod operation with this Blu-ray home theater, see pages 25 and 78 ~ 80.

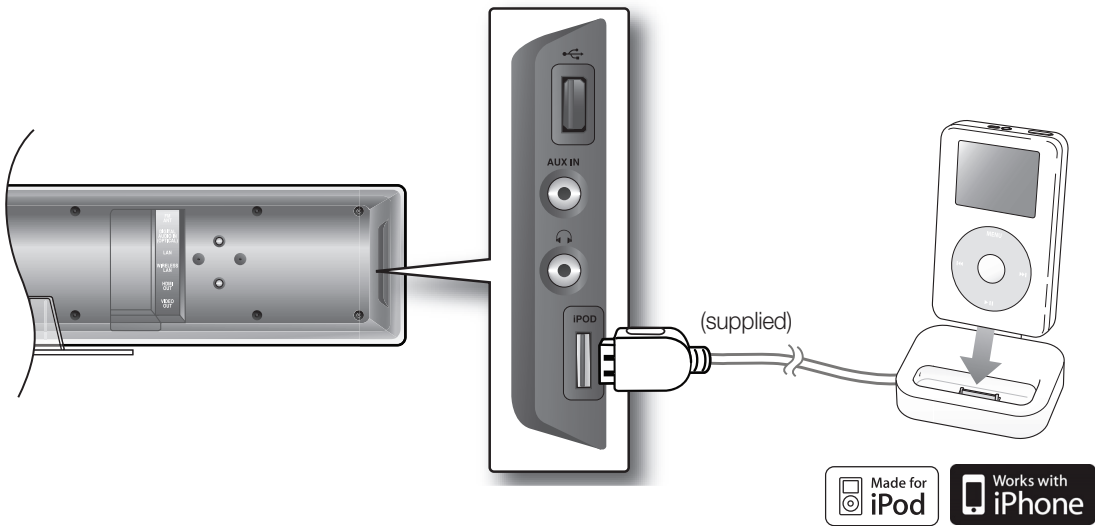









1. Connect the iPod Dock to the iPod Jack on the rear side of the main unit.
2. Place the iPod in the dock.
  - "iPod Connected" message appears on the TV screen.



- You must have the VIDEO output connected to your TV to view iPod video (See page 25).
- As the cable ports are close together, be sure to remove the USB memory drive before disconnecting the ipod docking cable.
- Adjust the volume to a moderate level before you connect your iPod and Blu-ray home theater.
- When the unit is powered on and you connect an iPod, the unit will charge your iPod's battery.
- Make sure to connect the dock connector so that the label "**SAMSUNG**" faces backward.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

## iPod models that can be used with the HT-BD8200

 <b>iPod nano</b> 3rd generation (video) 4GB 8GB	 <b>iPod</b> 5th generation (video) 30GB 60GB 80GB	 <b>iPod classic</b> 80GB 120GB 160GB
 <b>iPod touch</b> 1st generation 4GB 16GB 32GB	 <b>iPod nano</b> 4th generation(video) 8GB 16GB	 <b>iPhone 3G</b> 8GB 16GB
 <b>iPod touch</b> 2nd generation 8GB 16GB 32GB	 <b>iPhone</b> 4GB 8GB 16GB	



- “Made for iPod” means that an electronic accessory has been designed to connect specifically to the iPod and has been certified by the developer to meet Apple performance standards.
- “Works with iPhone” means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.


# Connections

## CONNECTING AUDIO FROM EXTERNAL COMPONENTS

### OPTICAL : Connecting an External Digital Component

Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).

1. Connect the Digital Input (OPTICAL) on the main unit to the Digital Output of the external digital component.
2. Press the **FUNCTION** button on the main unit to select **DIGITAL** input.
  - The mode switches as follows : **BD/DVD** → **DIGITAL** → **AUX** → **TUNER**.

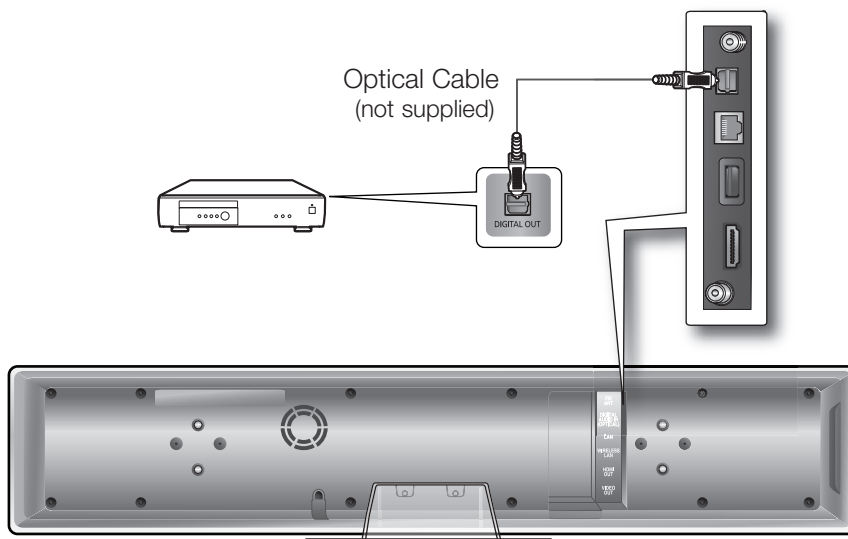


- To see video from your Cable Box/Satellite receiver, you must connect it's video output to a TV.
- This system supports Digital sampling frequencies of 32 kHz or higher from external digital components.
- This system supports only DTS and Dolby Digital audio, MPEG audio which is bitstream cannot be supported.

## AUX : Connecting an External Analog Component

Analog signal components such as a VCR.

1. Connect AUX IN (Audio) on the main unit to the Audio Out of the external analog component.
  - Be sure to match connector colors.
2. Press the **AUX** button on the remote control to select **AUX** input.
  - You can also use the **FUNCTION** button on the main unit.

The mode switches as follows : **BD/DVD** → **DIGITAL** → **AUX** → **TUNER**.

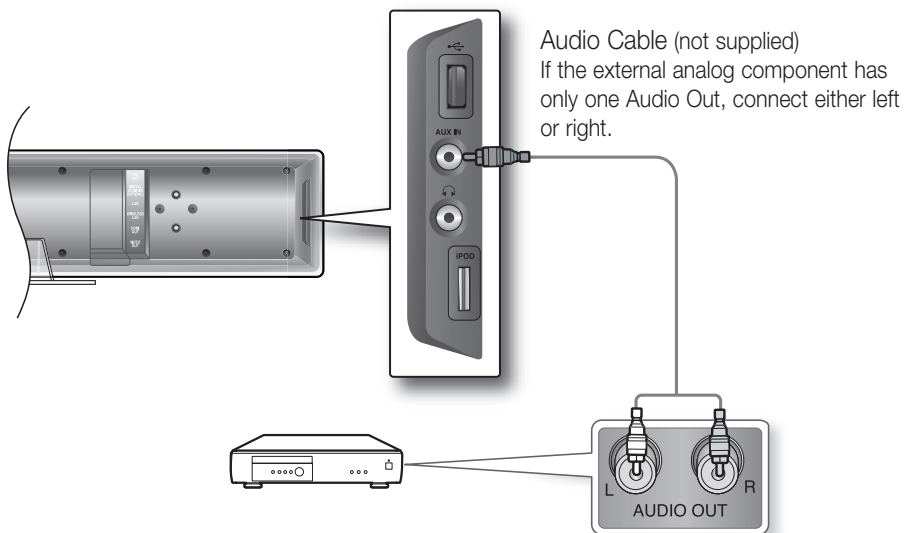

- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

# Connections


## CONNECTING TO THE NETWORK

To access network service or upgrade the current firmware, you must make one of the following connections.

By connecting to a network, you can access the BD-LIVE, Blockbuster, Netflix, Pandora, YouTube services, PC streaming and Software upgrades from Samsung's update server. We recommend you use an AP or router for the network. If you don't have one, you'll need two network providing services to use the PC streaming function.

### Case 1 : Connecting a Direct LAN Cable to your Modem

1. Using a Direct LAN Cable (UTP cable, not supplied), connect the LAN terminal of the Blu-ray Disc Player to the LAN terminal of your modem.

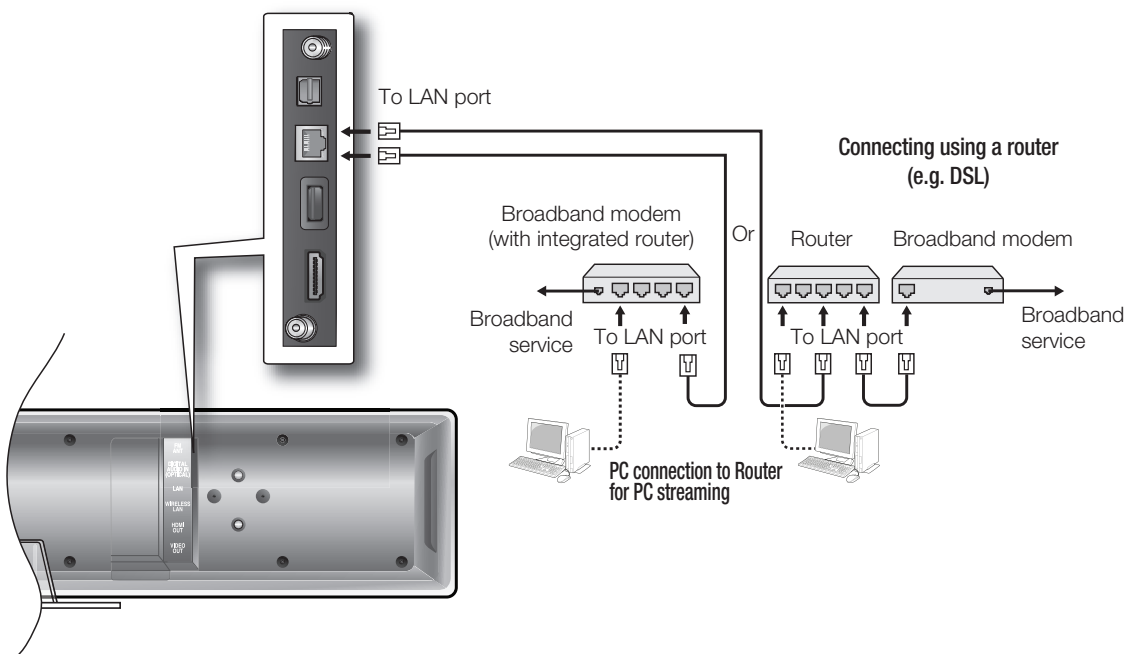


- To use the **PC streaming** function (see pages 81~82), please make a network between your PC and router.
- Internet access to Samsung's update server may not be allowed, depending on the router you use or the ISP's policy.  
For more information, contact your ISP (Internet Service Provider).
- For DSL users, please use a router to make a network connection.



## Case 2 : Connecting to a Wireless IP sharer

You can connect to network with a Wireless IP sharer. See page 50 for Wireless Network Setup.

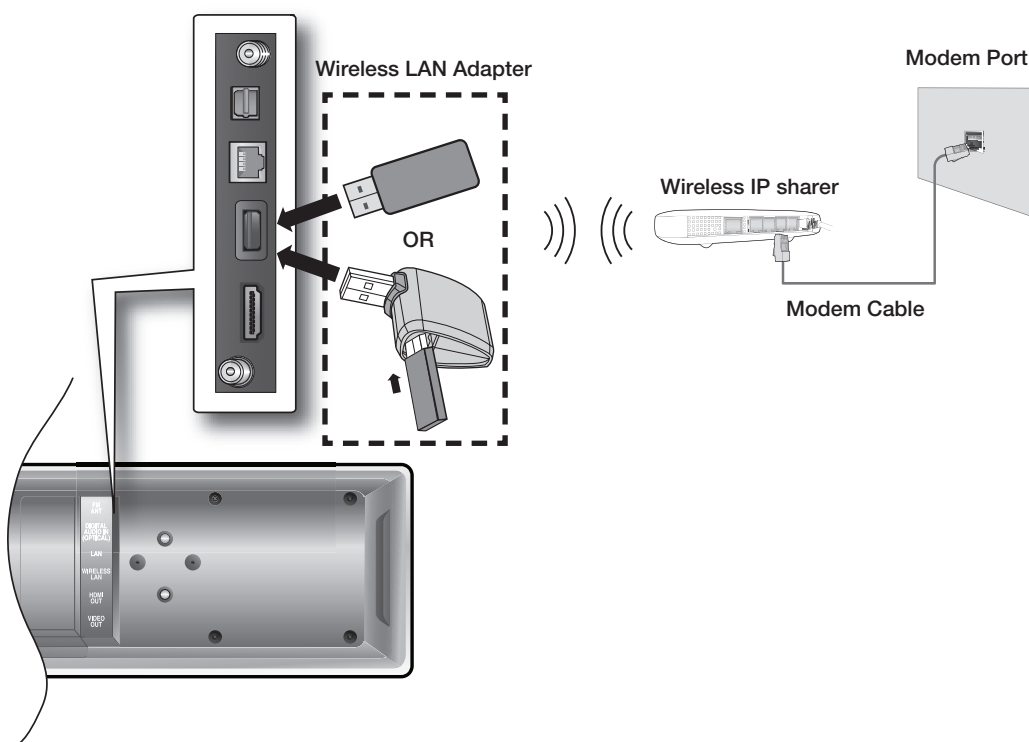

- This unit is compatible with the Samsung Wireless LAN Adapter only. (Model name: WIS09ABGN).
- You must use a wireless IP sharer that supports IEEE 802.11 a/b/g/n. (n is recommended for stable operation of the wireless network.)
- Wireless LAN, in its nature, may cause interference, depending on the use condition (AP performance, distance, obstacle, interference by other radio devices, etc).
- Set the wireless IP sharer to Infrastructure mode. Ad-hoc mode is not supported.
- When applying the security key for the AP (wireless IP sharer), only the following is supported.
  - 1) Authentication Mode : WEP, WPAPSK, WPA2PSK
  - 2) Encryption Type : WEP, TKIP, AES
- Connect the Wireless Lan Adapter to only the Wireless Lan Jack on the back of the main unit.


# Connections

---


## CONNECTING THE FM ANTENNA

---

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

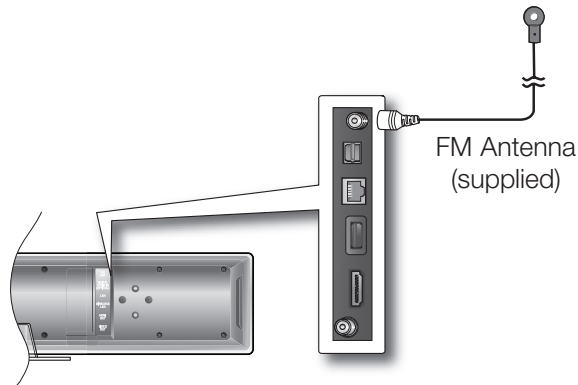

---

 ■ This unit does not receive AM broadcasts.

## COOLING FAN

---

The cooling fan supplies cool air to the unit to prevent overheating. Please observe the following cautions for your safety.


- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit may rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

## ATTACHING THE TOROIDAL FERRITE CORE TO THE POWER CORD OF THE MAIN UNIT

---

If you attach a Toroidal ferrite core to the power cord of the main unit, it will prevent help to prevent RF interference from radio signals.

1. Pull the fixing tab of the Toroidal ferrite core to open it.
2. Make a loop twice in the main unit power cord.
3. Attach the Toroidal ferrite core to the main unit power cord as the figure shows and press it until it clicks.

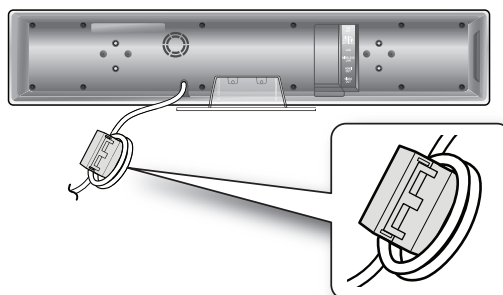

# Basic functions of your Blu-ray Home Theater


This section introduces basic playback functions and playback by disc type.

## BEFORE PLAYING

- Turn on your TV and set it to the correct Video Input (the input the Blu-ray Home Theater is connected to).

After plugging in the player, the first time you press the **POWER** button, this screen comes up:

If you want to select a language, press a **NUMBER** button. (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **STOP** (■) button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the MENU LANGUAGE SELECTION window appears again where you can reset your preferred language.

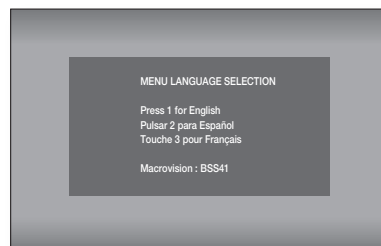

- Discs which can be played on this player (For the following discs, the ability to play back may depend on recording conditions.)

- |  |                   |              |
|--|-------------------|--------------|
| • BD-ROM   | • BD-RE           | • BD-R       |
| • DVD-R  | • DVD-RW (V mode) | • CD-RW/CD-R |
| • DivX   | • MKV             | • MP4        |
| • The unit may not play certain CD-RW/CD-R and DVD-R due to the disc type or recording conditions. |                   |              |

- Discs which cannot be played on this player.

- |                                   |                                       |         |
|-----------------------------------|---------------------------------------|---------|
| • HD DVD                          | • DVD+RW                              | • DVD+R |
| • DVD-ROM                         | • DVD-RAM                             | • CDV   |
| • CD-ROM                          | • CVD                                 | • CD-I  |
| • Super Audio CD(except CD layer) | • CDGs play audio only, not graphics. |         |


- Blu-ray is a new and evolving format. Accordingly, disc compatibility issues with new and existing format discs are possible. Not all discs are compatible and not every disc will playback.

For additional information, refer to the Disc Type section of this Manual. If you encounter compatibility problems, please contact SAMSUNG's customer care center.

# Basic functions of your Blu-ray Home Theater

## ON-SCREEN MENU NAVIGATION

❖ The GUI (Graphical User Interface) in this manual may differ, depending on the firmware version.

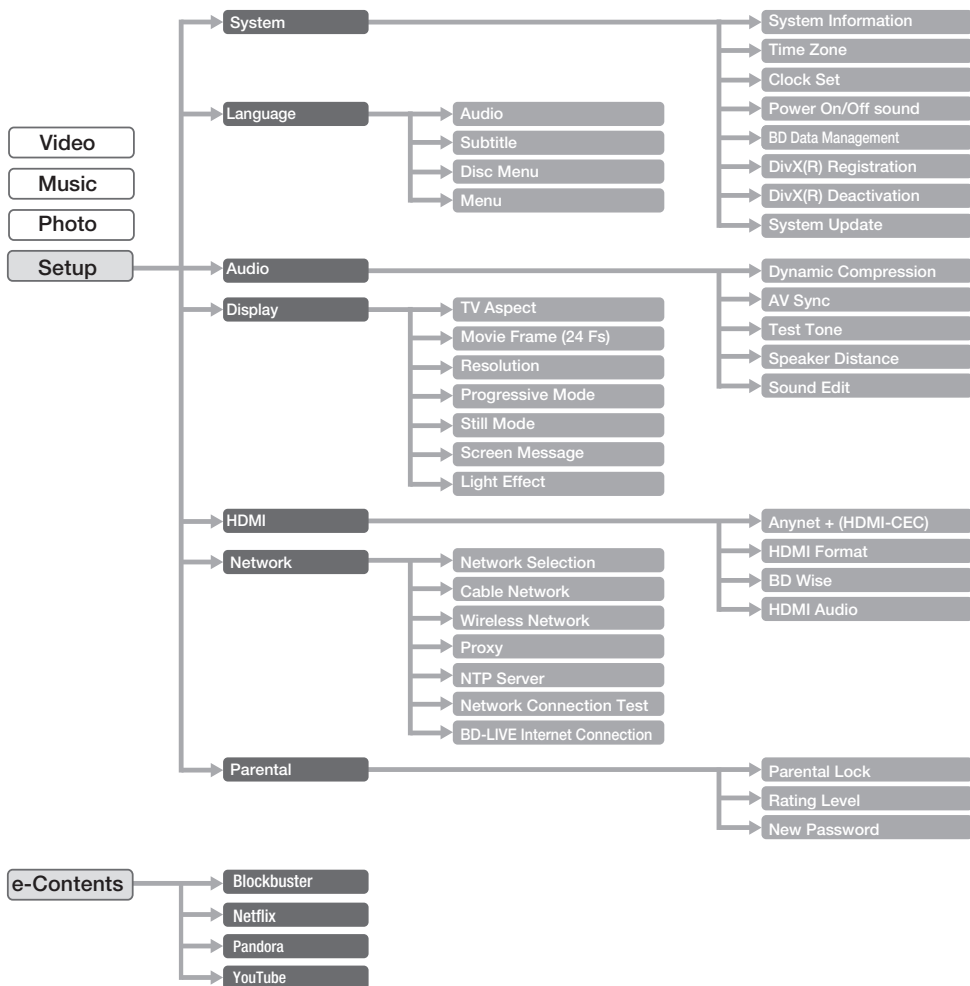

## PLAYING A DISC

1. Press **OPEN/CLOSE** button to open the compartment.
2. Load a disc vertically into the disc slot.
  - Place a disc gently into the slot with the disc's label facing out.
  - Playback starts automatically.
3. If the disc does not play automatically, it will display the main disc menu.
  - To play a Blu-Ray disc from the disc menu, press **ENTER**.
  - To play a DVD from the disc menu, press **PLAY** or **ENTER**.



- When you stop disc play, the player remembers where you stopped, so when you press PLAY button again, it will pick up where you left off. This is called the "Resume" function. With some Blu-ray discs(BD-J), this function may not work.
- Press the STOP button twice during playback to disable the Resume function.
- To pause the playback, press the PAUSE button during playback. To resume, press the PLAY button.
- If the player is left in the stop mode more than 5 minutes without any user interface, a screen saver will appear on your TV. If the player is left in the screen saver mode for more than 15 minutes, the power will automatically turn off except during playback of an CD-DA (Automatic Power-Off Function).
- If no buttons are pressed on the unit or remote control for more than 5 minutes when the unit is in Pause mode, operation will stop (except for some Blu-ray Discs).

## SETTING THE SOUND

### Setting the Power On / Off Melody Sound

A Melody sound can be set so it is heard each time you turn the player on or off.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Power On/Off sound**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select **On** or **Off**, then press the **ENTER** or **▶** button.
6. Press the **MENU** button to exit the setup menu.



## USING THE SEARCH AND SKIP FUNCTIONS

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

### Searching through a Chapter or Track



During playback, press the **SEARCH** (**◀▶**) button.

Each time you press the **SEARCH** button, the playback speed will change as follows.

BD-ROM, BD-RE, BD-R, DVD-VIDEO, DVD-RW, DVD-R	▶▶ X 2 → ▶▶ X 4 → ▶▶ X 8 → ▶▶ X 16 → ▶▶ X 32 → ▶▶ X 128 ◀◀ X 2 → ◀◀ X 4 → ◀◀ X 8 → ◀◀ X 16 → ◀◀ X 32 → ◀◀ X 128
DivX, MKV, MP4	▶▶ X 2 → ▶▶ X 4 → ▶▶ X 8

- You can scan the program in reverse.
- To return to normal speed playback, press the **PLAY** button.



■ No sound is heard during search mode.

### Skipping Tracks



During playback, press the **SKIP** (**◀▶**) button.

When playing a Blu-ray Disc/DVD, if you press the **SKIP** (**▶**) button, it moves to the next chapter.

If you press the **SKIP** (**◀**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.

# Basic functions of your Blu-ray Home Theater


## SLOW MOTION PLAY/STEP MOTION PLAY

### Slow Motion Play



In pause or step mode, press the **SLOW** button on the remote control for Slow Motion play.

- If you press the **SLOW** button, **1/8** **1/4** **1/2**
- To return to normal speed playback, press the **PLAY** (⏮) button.

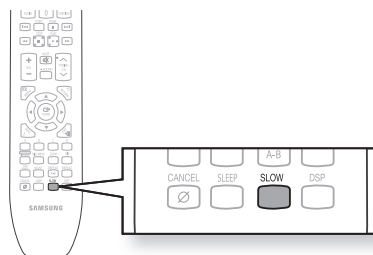


- This (⊗) icon indicates an invalid button press.
- No sound is heard during slow mode.
- Slow motion operates only in the forward direction.

### Step Motion Play



Press the **STEP** button on the remote control during play for Step Motion play.

- Each time the button is pressed a new frame will appear.
- When the **STEP** button is pressed, the next frame will be activated.
- Press the **PLAY** (⏮) button to resume normal play.

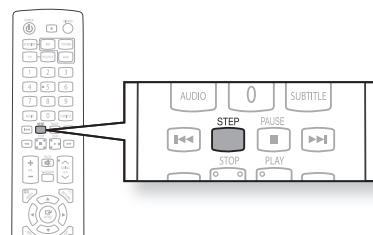



- No sound is heard during step mode.
- Step motion operates only in the forward direction.

# System setup

## SETTING THE CLOCK

### Choose your time zone

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Time Zone**, then press the **ENTER** or **▶** button.
5. Use the **◀▶** button to place the cursor to the appropriate time zone for your area and press the **ENTER** button.

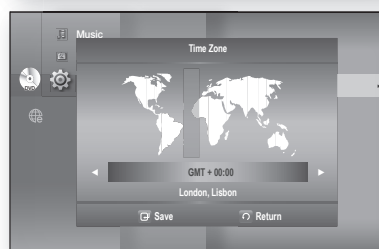
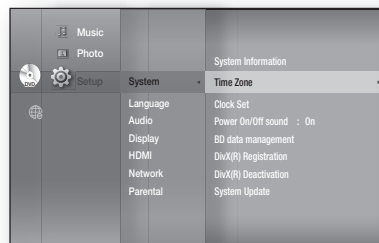


- To set the time automatically, set the NTP server to **On** (see page 53).

### Set the clock

To setup, follow steps 1 through 3 above.

4. Press the **▲▼** buttons to select **Clock Set**, then press the **ENTER** or **▶** button.
5. Press the **◀▶** buttons to move to “**da.**”(date), “**hr**” (hour), “**min**” (minute). Set the date and time by pressing the **▲▼** buttons, then press the **ENTER** button.

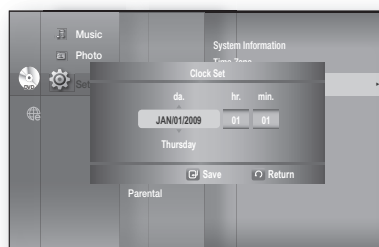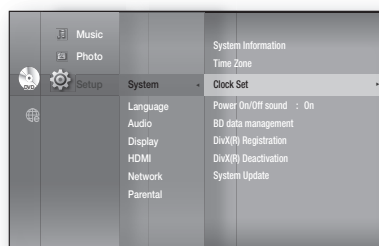

# Language setup

## SETTING UP THE LANGUAGE OPTIONS

Once you set the audio, subtitle, disc menu and player menu language options, they will be applied automatically every time you watch a movie.

- If you want to choose a different audio and subtitle language while playing a disc, you can also use the disc menu to make the selection.




1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.

3. Press the **▲▼** buttons to select **Language**, then press the **ENTER** or **▶** button.  
Language setup menu will be displayed.

4. Press the **▲▼** buttons to select the desired language option, press the **ENTER** or **▶** button.
  - **Audio** : For the disc audio language.
  - **Subtitle** : For the disc subtitles.
  - **Disc Menu** : For the disc menu contained on the disc.
  - **Menu** : For the on-screen menu of your Blu-ray Home Theater.

5. Press the **▲▼** buttons to select the desired language, then press the **ENTER** button.

- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.
- The selected language will only appear if it is supported on the disc.

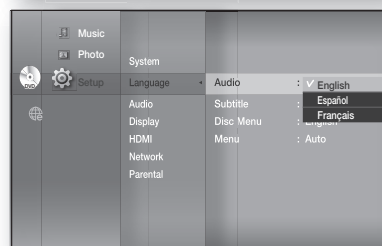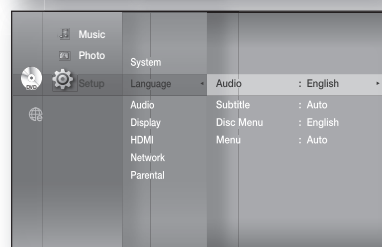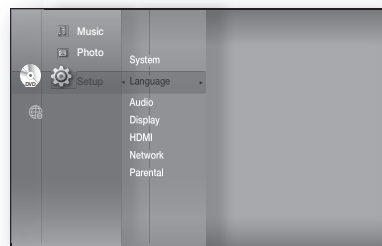




# Audio setup

## SETTING UP THE SPEAKER OPTIONS

### Dynamic Compression

This is only active when a Dolby Digital signal is detected.


- **On** : When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.
- **Off** : You can enjoy the movie with the standard Dynamic Range.

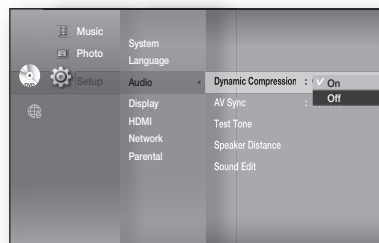

### AV Sync

Video may look slower than the audio when the player is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.



- You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

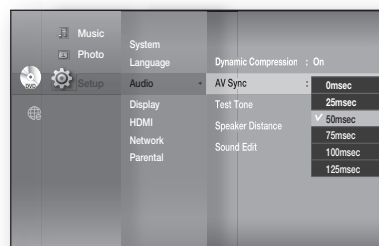

### Setting the Test Tone

Use the Test Tone feature to check the speaker connections.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.
4. Press the **▲▼** buttons to select **Test Tone**, then press the **ENTER** or **▶** button.
5. Press the **RED(A)** button
  - A test tone will be sent to **L → R → LFE** in order so you can make sure the speakers are set up correctly.
6. To end the test tone, press the **RED (A)** button again.

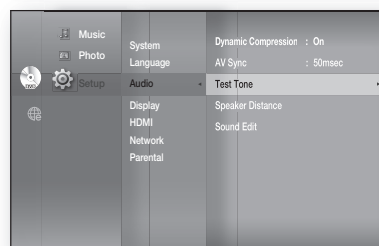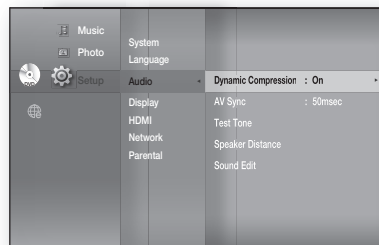

- Press the **RETURN** button to return to the previous menu.
- When playing a BD/DVD or CD, this will work only in Stop mode.
- Use this function to check that each speaker is correctly connected and that there is no problem.
- When HDMI AUDIO is on (audio is produced through TV speakers), the TEST TONE function is not available.


# Audio setup

## SETTING UP THE SPEAKER OPTIONS


### Setting the Speaker Distance

If the location of the unit is different from the listening position, you can adjust the delay time of the audio signals from the unit's speakers and the subwoofer.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.

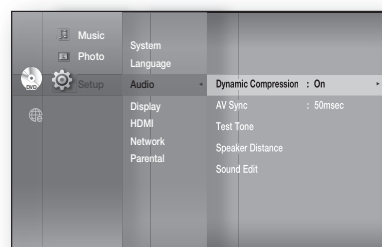

4. Press the **▲▼** buttons to select **Speaker Distance**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select the desired Speaker, then press the **◀▶** buttons to set the Speaker Distance.
  - You can set the Speaker Distance between 1ft(0.3m) and 30ft(9m).
6. When done, use the **▲▼◀▶** buttons to select **Save**, then press the **ENTER** button.  
If you don't want to save your settings, use the **▲▼◀▶** buttons to select **Cancel**, then press the **ENTER** button.

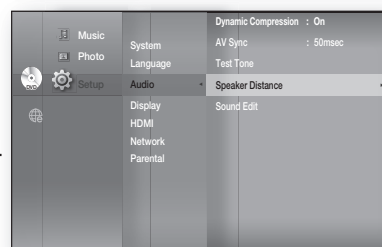


- Press the **RETURN** button to return to the previous menu.

### Setting the Sound Edit


You can adjust the balance and level for each speaker.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.

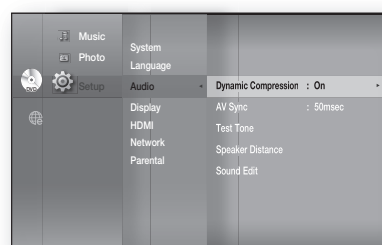

## Setting the Sound Edit

4. Press the ▲▼ buttons to select **Sound Edit**, then press the **ENTER** or ► button.
5. Press the ▲▼ buttons to select the desired Speaker, then press the ◀▶ button to adjust the settings.
6. When done, use the ▲▼◀▶ buttons to select **Save**, then press the **ENTER** button.  
If you don't want to save your settings, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.

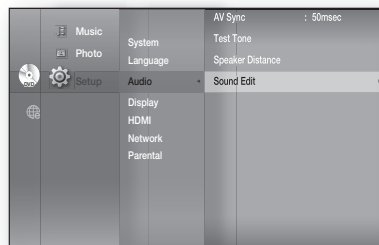

- Press the **RETURN** button to return to the previous menu.

### Adjusting Front Speaker Balance

- You can select between 0, -6, and OFF.
- The volume decreases as you move closer to -6.

### Adjusting Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.


## V-SOUND (Virtual Sound)

Produces realistic sound through 2.1 channel audio system with the aid of virtual effects, this gives you the feeling you are listening to 5.1 channel audio system.

Press the **V-SOUND** button.

- Each time the button is pressed, the selection changes as follows :

**V.SOUND ON** → **V.SOUND OFF**

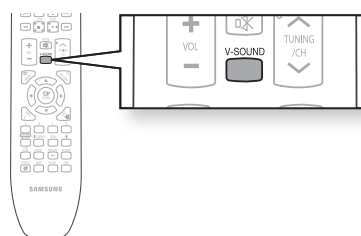


- Only the multi-channel is supported.

## DSP Function

Press the **DSP** button.

- Each time the button is pressed, the selection changes as follows:

**SMART SOUND** → **AUDIO UPSCALING** →  
**POWER BASS** → **DSP MODE OFF**

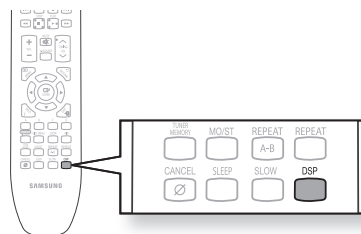

- **SMART SOUND** : This will regulate and stabilize the volume level against a drastic volume change when changing channels or during a scene transition.
- **AUDIO UPSCALING** : This also helps enhance your sound experience (ex. mp3 music). You can upscale your MP3 level sound(24 kHz, 8bit) to CD level sound(44.1 kHz, 16bit).
- **POWER BASS** : The POWER BASS function boosts the bass for more powerful sound.



# Display setup

## SETTING UP THE DISPLAY OPTIONS

This function allows you to setup the TV screen settings. This function depends on the disc or TV type. It may not work with some discs or TVs.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Display**, then press the **ENTER** or **▶** button.  
Video setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option from the options on the following pages.
5. Press the **▲▼** buttons to select the desired sub-menu item from a video display option, then press the **ENTER** button.
6. Each video option is described in detail below.

-  ■ Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

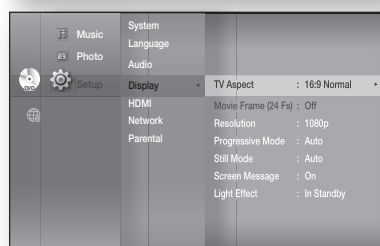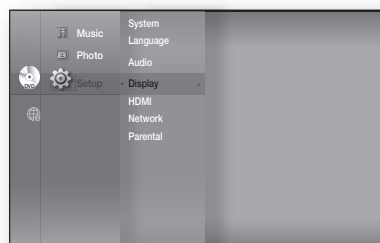

### TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting. (aspect ratio)



#### • 4:3 Letter Box :

Select when you want to see the total 16:9 ratio screen a Blu-ray Disc/DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.



#### • 4:3 Pan-Scan :

Select when you want to see the 16:9 video supplied by the Blu-ray Disc/DVD without the black bars on top and bottom, even though you have a TV with a 4:3 ratio screen (extreme left and right portion of the movie picture will be cut off).




#### • 16:9 Wide :


You can view the full 16:9 picture on your widescreen TV.



#### • 16:9 Normal :

Certain movies (4:3 source) will be displayed in 4:3 Pillarbox (black bars on sides of picture) if 16:9 normal is selected.

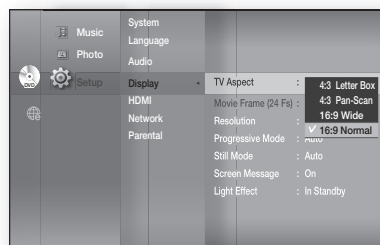

-  ■ Depending on the disc type, some aspect ratios may not be available.
- If you select an aspect ratio which is different than the aspect ratio of your TV screen, then the picture might appear to be distorted.


## Movie Frame (24 Fs)

Movies are usually filmed at 24 frames per second. Some Blu-ray Discs have the capability of playing back at this frame rate. Setting the Movie Frame (24Fs) feature to ON allows you to adjust the Blu-ray Home Theater's HDMI output to 24 frames per second for improved picture quality.

You can enjoy the Movie Frame (24Fs) feature only on a TV supporting this frame rate.

This menu can only be selected in 1080i or 1080p HDMI output resolution modes.


Depending on the disc, two types of frame rates may be included: Movie material (24 frame) and Video material (30 frame). When the setting switches between Movie (24 frame) and Video (30 frame), the screen may blink for a few seconds.

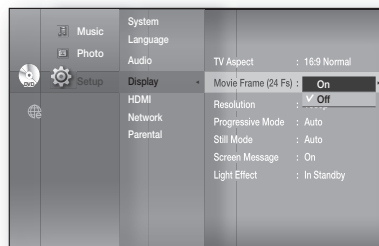

## Resolution


Sets the output resolution of the HDMI and Composite video signal.

- The number in 480i, 480p, 720p, 1080p and 1080i indicates the number of lines of video. The i and p indicate interlace and progressive scan, respectively.
  - BD Wise : Automatically sets the optimal resolution when connected via HDMI to a TV with the BD Wise feature. (The BD Wise menu item appears only if BD Wise is set to On.)
  - 1080p : Outputs 1080 lines of progressive video (HDMI only).
  - 1080i : Outputs 1080 lines of interlaced video (HDMI only).
  - 720p : Outputs 720 lines of progressive video (HDMI only).
  - 480p : Outputs 480 lines of progressive video (HDMI only).
  - 480i : Outputs 480 lines of interlaced video (Composite only).

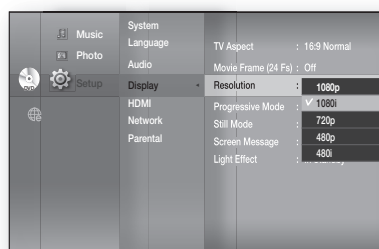

If the connected TV does not support Movie Frame or the selected resolution, you will see the following message:

If you select **Yes** and the resolution is not supported, the TV's screen will be blank. Please wait for 15 seconds and the resolution will revert to the previous value automatically.

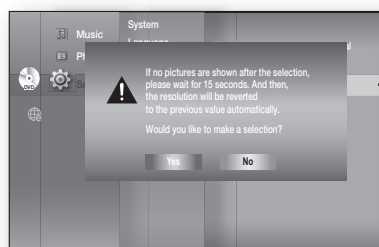

- If the screen is blank, press and hold the **STOP** (■) button on the front of the player for more than 5 seconds (no disc inserted). All settings are restored to the factory default. Follow the steps on the previous page to access each mode and select the Display Setup that your TV will support.
- When the factory default settings are restored, all the user data stored in the BD data will be deleted.

# Display setup

## SETTING UP THE VIDEO DISPLAY/OUTPUT OPTIONS

### Resolution according to the output mode

- Blu-ray Disc playback

Setup \ Output	HDMI	COMPOSITE
1080p, Movie Frame(24Fs) off	1080p@60F	480i
1080p/1080i, Movie Frame (24Fs) on	1080p@24F	480i
1080i, Movie Frame (24Fs) off	1080i	480i
720p	720p	480i
480p	480p	480i
480i	480p	480i

- DVD playback

Setup \ Output	HDMI	COMPOSITE
1080p	1080p@60F	480i
1080i	1080i	480i
720p	720p	480i
480p	480p	480i
480i	480p	480i




- This player has the HDMI Auto Detect Feature. When the player is first connected to a TV via HDMI, the player's output will be set automatically to HDMI.
- If the HDMI Auto Detection feature does not work, you can't select the 1080p resolution or Movie Frame (24Fs).
- The Blu-ray Disc must have the 24 frame feature in order to use the Movie Frame (24Fs) mode.

## Progressive Mode

The Progressive Mode helps to improve picture quality when viewing 480i resolution DVD discs.

- **Auto** : Select this to have the player automatically set the best picture for the DVD you're watching.
- **Video** : Select this for the best picture from Concert or TV show DVDs.

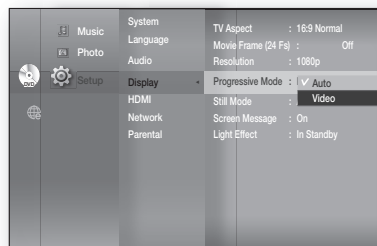


## Frame & Field bar

### Still Mode


Set the Auto, Field or Frame setting for the best possible still picture (pause mode) from a DVD.

- **Auto**: Select this setting to have the player automatically display the best Still picture depending on the content.
- **Field Mode**: Select this when pausing a scene with a lot of action.
- **Frame Mode**: Select this to increase the resolution of the Still picture.

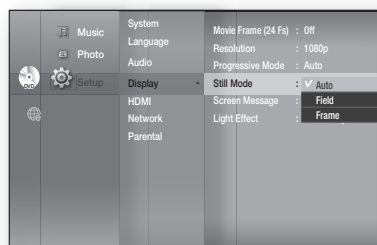

### Screen Message


- **On** : Displays messages related to operation mode.
- **Off** : Does not display messages related to operation mode.

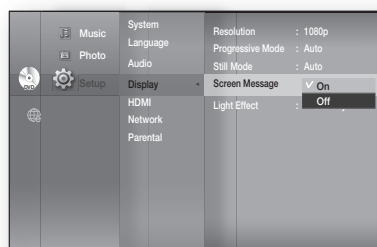

### Light Effect

Light Effect mode adds moody lighting under the main unit.

- **Off** : Always off
- **In Standby** : Lights on while in stand-by
- **Playing** : Off in stand-by mode, lights on while playing
- **Always** : Always on

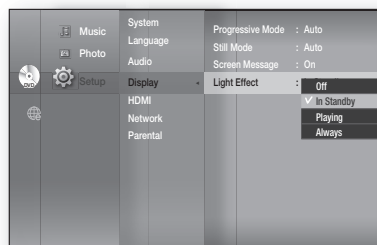


# HDMI setup

## SETTING UP THE HDMI SETUP OPTIONS

You can set the HDMI options such as Anynet+, HDMI Format, BD Wise, HDMI Audio.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **HDMI**, then press the **ENTER** or **▶** button.  
HDMI setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option, then press the **ENTER** or **▶** button.

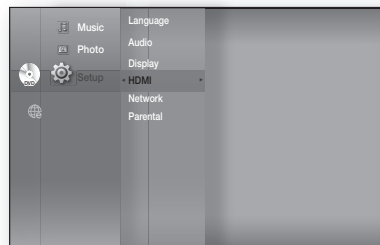

- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

### Anynet+ (HDMI-CEC)

**Samsung products only**

#### What is Anynet+?

Anynet+ is a convenient function that offers linked operations with other Samsung products with the Anynet+ feature.

You can operate this unit using a Samsung TV remote control or power on your Samsung TV and Home theater and start disc playback simply by pressing the **PLAY** button on the TV's remote.



- This function is not available if the HDMI cable does not support CEC.

#### To use Anynet+

1. Connect the Blu-ray Home Theater to a Samsung TV with an HDMI cable. (See pages 22~23)
2. Set the Anynet+ function on your TV. (See the TV instruction manual for more information.)

#### Anynet+ Functions

- One touch play  
You can power on your Samsung TV and Home Theater, and play the disc in this unit simply by pressing the **PLAY** button on the TV's remote.
- One touch watching  
Select "Watching Blu-ray Home Theater" or "Connected to Blu-ray Home Theater" (depending on your TV's menu) in the Anynet+ menu on the TV. The Blu-ray Home Theater will automatically turn on and the TV will be switched to HDMI mode.
- Remote control Link  
You can operate this player with your Samsung TV remote control.
- Available buttons on the Samsung TV remote: These buttons work the same as this Blu-ray Home Theater's remote control.
  - Playback control buttons :
  - Menu operation button :
  - Numeric buttons :



## TV Anynet+ Menu

When you press the Anynet+ button on your Samsung TV's remote control, the following On-Screen Display (OSD) will be shown.

- Blu-ray Home Theater Menu
  - When playing a movie : brings up the disc's menu (same as **DISC MENU** button on the Blu-ray Home Theater's remote control)
  - In Stop mode : brings up the SETUP menu (same as the **MENU** button on the Blu-ray Home Theater's remote control.)
- Blu-ray Home Theater Operation Menu
  - When playing a DVD VIDEO, DVD-RW/-R, BD-ROM, BD-RE : shows INFO OSD (same as **INFO** button on the player's remote control)




- These menus may look different depending on your Samsung TV.

## HDMI Format

You can optimize the HDMI output for connection to a TV or Monitor.

- **TV** : Select if connected to a TV via HDMI.
- **Monitor** : Select if connected to a Monitor via HDMI.  
If the player is connected to a TV, the Monitor option is unavailable.

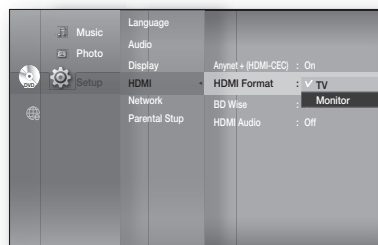


- A TV or monitor has to be connected to the player before you select this option.

## BD Wise

### Samsung products only

BD Wise is Samsung's latest inter-connectivity feature. When you connect Samsung products with BD-Wise to each other via HDMI, the optimum resolution will be set automatically.

- **On** : The original resolution of the BD/DVD disc will be output to the TV direct.
- **Off** : The output resolution will be fixed according to the Resolution previously set, regardless of the resolution of the disc.

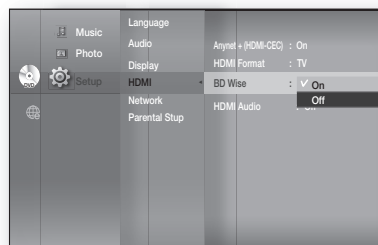

- If you want to change the resolution when you set BD Wise on, you must set BD Wise to Off in advance.
- If you set BD Wise to off, the resolution of the connected TV will be automatically adjusted to its maximum resolution.
- If the player is connected to a device that does not support BD Wise, you can not use the BD wise function.
- For a proper operation of BD Wise, set BD Wise to ON in the menus of the player and the TV.

# HDMI setup

---

## SETTING UP THE HDMI SETUP OPTIONS


---

### HDMI Audio

---

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

- **On** : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
- **Off** : Video is transmitted over the HDMI connection cable only, and audio is output through the Blu-ray Home Theater speakers only.

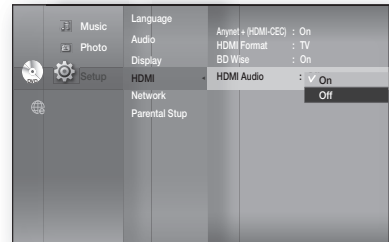

- The default setting of this function is HDMI Audio Off.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.


# Parental setup

## SETTING UP THE PARENTAL LOCK

The Parental Lock function works in conjunction with Blu-ray Disc/DVDs that have been assigned a rating which helps you control the types of Blu-ray Disc/DVDs that your family watches. There are up to 8 rating levels on a disc.




1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.

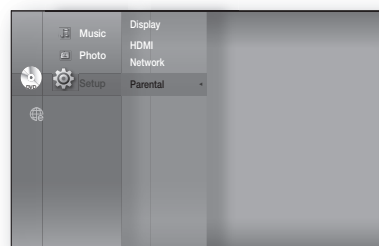


3. Press the **▲▼** buttons to select **Parental**, then press the **ENTER** or **▶** button.

When you operate your Blu-ray Home Theater for the first time, the “Enter New password.” message will be displayed.

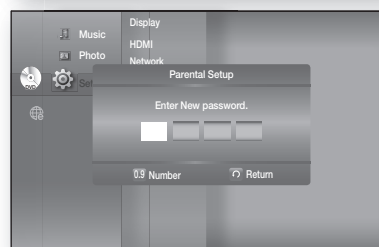


4. Enter the 4-digit password using the number buttons on the remote control.

The “Confirm the password.” message will be displayed. Enter your password again.

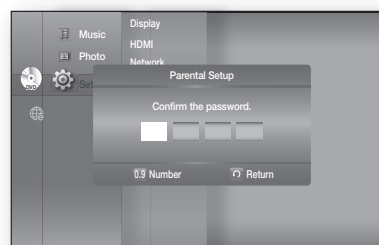

5. Press the **ENTER** or **▶** button to select Parental Lock.
6. Press the **▲▼** buttons to select **On** or **Off**, then press the **ENTER** button.

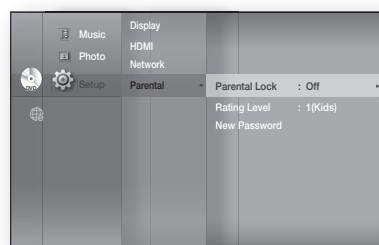

- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

# Parental setup

## SETTING UP THE PARENTAL LOCK

### If you forgot your password


1. Remove the disc.
2. Press and hold the **STOP** (■) button on the front panel for 5 seconds or more.
  - All settings will revert to the factory settings.



- When the factory default settings are restored, all the user data stored in the BD data will be deleted.




### Setting the Rating Level

1. Press the ▲▼ buttons to select **Rating Level**, then press the **ENTER** or ► button.
2. Press the ▲▼ buttons to select the rating level you want, then press the **ENTER** button. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play. A larger number indicates that the program is intended for adult use only. Level 8 is the most restrictive and Level 1 is the least.

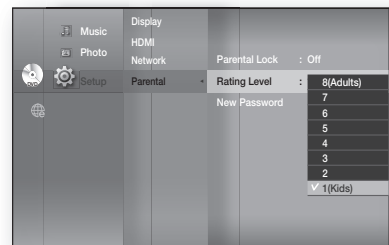

### Changing the Password

1. Press the ▲▼ buttons to select **New Password**, then press the **ENTER** or ► button.
2. Enter the 4-digit password using the number buttons on the remote control. The “Enter New password.” message will be displayed.
3. Enter your password again using the number buttons on the remote control.

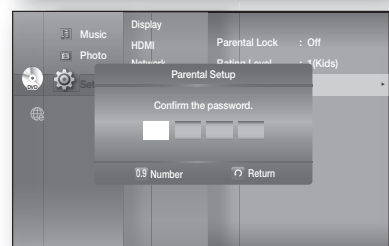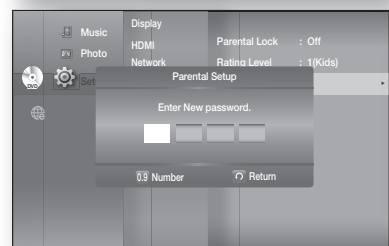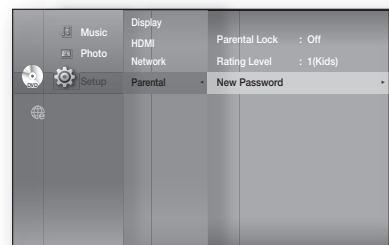


# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS

To obtain information on the proper settings, check the network settings on your computer or contact your Internet provider.

To set the network of your Blu-ray Home Theater, follow the steps below.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Network**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the desired network option from the options described below, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select the desired item, then press the **ENTER** button.  
Each network option is described in detail below.

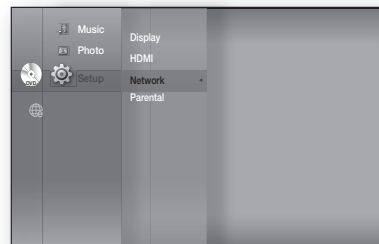


### Network Selection

Select Cable or Wireless as the method to connect to the network.

To setup, follow steps 1~3 above.

4. Press the **▲▼** buttons to select **Network Selection**, then press the **ENTER** or **▶** button.
  - **Cable** : Select this to connect to the network using a cable. (see page 28)
  - **Wireless** : Select this to connect to the network wirelessly. (see page 29)

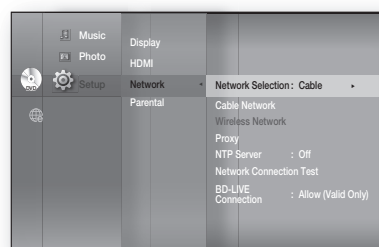



### Cable Network

To setup, follow steps 1~3 above.

4. Press the **▲▼** buttons to select **Cable Network**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select **DHCP**, then press the **ENTER** button.



- If DHCP is set to **On**, you can't select IP Address, Subnet Mask or Gateway.
- If DNS is set to **Auto**, you can't select Primary/Secondary DNS.

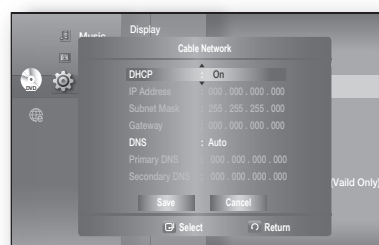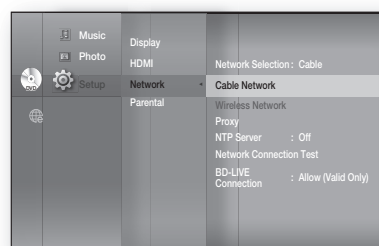


# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS


6. Press the ▲▼ buttons to select a desired item, then press the **ENTER** button.

- If DHCP is set to **Off** and, DNS to Manual, enter your IP Address, Subnet Mask, Gateway and Primary DNS settings (Secondary DNS is optional).

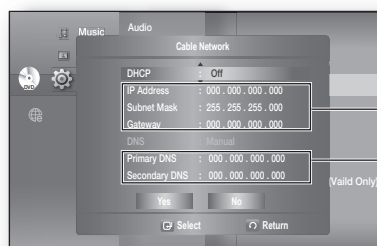

Setup available

- If DHCP is set to **On** and, DNS to Manual, enter your Primary DNS setting (Secondary DNS is optional).

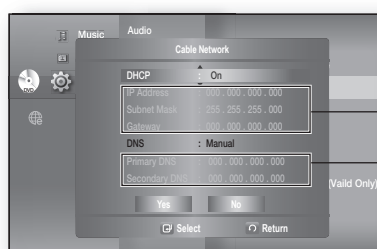


Setup available

Setup not available

- If DHCP is set to **On** and, DNS to Auto, you don't need further or additional settings.



- When you select an item, use the number and ▲▼◀▶ buttons.
- If the automatic settings don't work, contact your ISP.

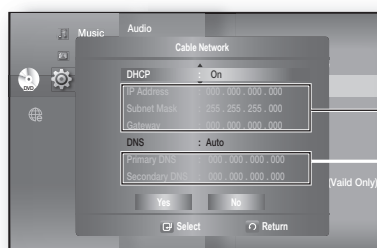

Setup not available

7. When done, use the ▲▼ buttons to select **Save**, then press the **ENTER** button.

8. If you don't want to save your work, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.




- The IP address used in this manual is for illustrative purposes only. You must refer to your network settings for the actual IP address.
- To obtain settings for IP address, Subnet mask, Gateway and Primary DNS, check the network settings in your computer or contact your internet service provider.

## Wireless Network

To setup, follow steps 1~3 on page 49.


4. Press the ▲▼ buttons to select **Wireless Network**, then press the **ENTER** or ▶ button.

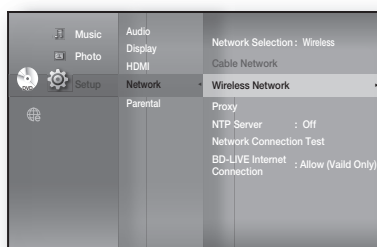

5. Press the ▲▼ buttons to select **DHCP**, then press the **ENTER** button.





- If DHCP is set to **On**, you can't select IP Address, Subnet Mask or Gateway.
- If DNS is set to **Auto**, you can't select Primary/Secondary DNS.

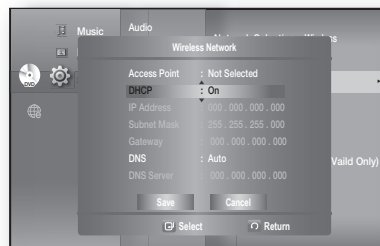

6. Press the ▲▼ buttons to select a desired item, then press the **ENTER** button.

- Select an Access Point, and then press the **ENTER** button to display an available list of APs. (It may take several seconds to search.)

- When you select an AP and press the **ENTER** button, it tries to connect to the designated AP.
- If successful, a notification appears. (If selected AP shows a Lock icon, you may need to provide security authentication.)
- Select your appropriate Security Access Point if it is known. If it is not, select WEP, WPA2PSK or WPA2PSK from the list below and enter in the password. Keep trying each Security Access Point and enter the Password until a connection is made.

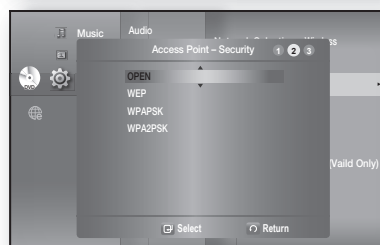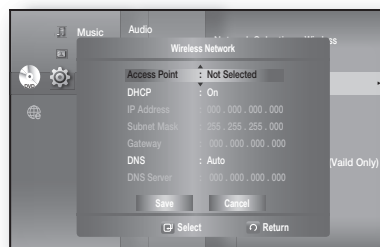


- Enter in the Password then press the **BLUE (D)** button to connect to your access point (Router).



For further details on AP security, refer to the AP's (Router) user manual.

- If DHCP is set to **Off** and, DNS to Manual, enter your IP Address, Subnet Mask, Gateway and DNS Server.

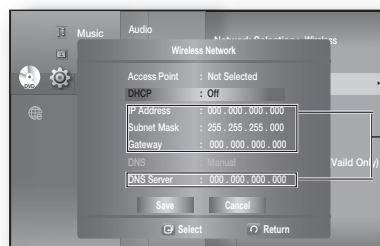


Setup available

# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS

- If DHCP is set to **On** and, DNS to Manual, enter your DNS Server.

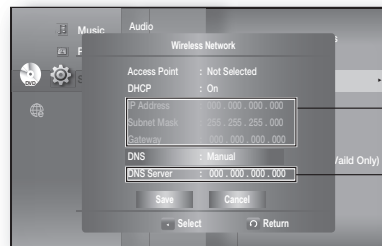


Setup available  
Setup not available

- If DHCP is set to **On** and, DNS to Auto, you don't need further or additional settings.



- When you select an item, use the number and ▲▼◀▶ buttons.
- If the automatic settings don't work, contact your ISP.

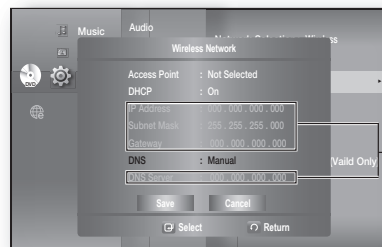

Setup not available

7. When done, use the ▲▼ buttons to select **Save**, then press the **ENTER** button.
8. If you don't want to save your work, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.



- The IP address used in this manual is for illustrative purposes only. You must refer to the your network settings for the actual IP address.
- To obtain settings for IP address, Subnet mask, Gateway and DNS Server, check the network settings in your computer or contact your internet service provider.


## Proxy Setting

A proxy server services requests by forwarding them to other servers.

If you are required to configure the proxy setting, enter the settings specified by the ISP.

To setup, follow steps 1~3 on page 49.

4. Press the ▲▼ buttons to select **Proxy**, then press the **ENTER** or ▶ button.
  - **Server**
  - **Port**
  - **User**
  - **Password**

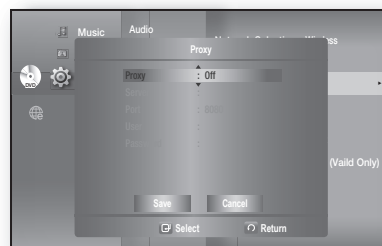

- For more information, contact your ISP (Internet Service Provider).




## NTP Server (Used to Retrieve Time Information from NTP Server)

To setup, follow steps 1~3 on page 49.

4. Press the ▲▼ buttons to select **NTP Server**, then press the **ENTER** or ► button.

- **On** : the player automatically connects to the Internet server in order to adjust the time setting.
- **Off** : the player does not connect to the Internet server to adjust the time setting.

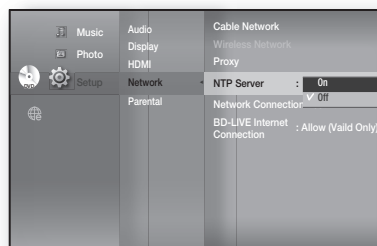


## Network Connection Test

Use this menu to check whether your network connection is working or not.

To setup, follow steps 1~3 on page 49.

4. Press the ▲▼ buttons to select **Network Connection Test**, then press the **ENTER** or ► button.

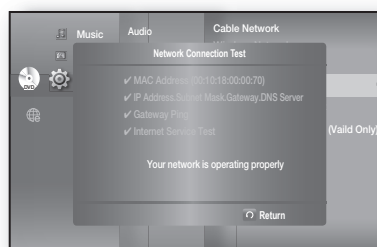

## BD-LIVE Internet Connection

The Blu-ray Home Theater supports BD-LIVE which enables you to enjoy a variety of interactive service contents provided by the disc manufacturer through a network connection. To enjoy this feature, you must first perform the LAN connection (see page 28) or Wireless Lan adapter connection to the USB slot.


\* You must have a minimum 1 GB USB Memory device inserted in one of the USB slots in order to download content from BD-LIVE.

The Internet connection may be restricted while you are using BD-LIVE contents.

To setup, follow steps 1~3 on page 49.

4. Press the ▲▼ buttons to select **BD-LIVE Internet Connection**, then press the **ENTER** or ► button.

- **Allow (All)** : The Internet connection will be allowed for all BD-LIVE contents.
- **Allow (Valid Only)** : The Internet connection will be allowed only for BD-LIVE contents containing a valid certificate.
- **Prohibit** : No Internet connection will be allowed for any BD-LIVE content.

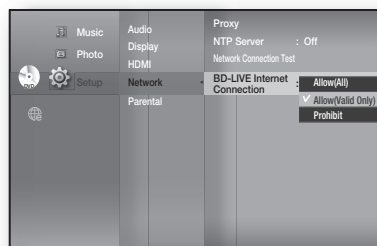

- **What is a valid certificate?** When the Blu-ray Home Theater uses BD-LIVE to send the disc data and a request to the server to certify the disc, the server uses the transferred data to check if the disc is valid and sends the certificate back to the player.
- The Internet connection may be restricted while you are using BD-LIVE contents.

# BD data management


BD Data (stored in external USB flash memory) is Blu-ray Disc content such as trailers and other special features downloaded from the BD-LIVE service or Blu-ray Discs.

\* You must have a minimum 1GB USB Memory device inserted in one of the USB slots in order to download content from BD-LIVE.

## SYSTEM DEVICE MANAGEMENT


You can manage user data stored in BD data.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **BD Data Management**, then press the **ENTER** or **▶** button.

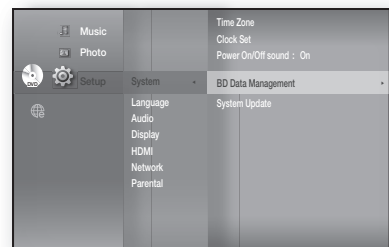

### - To delete the external flash memory -

1. Press the **ENTER** button to select BD Data Delete.  
The message "All BD data will be deleted. Do you want to continue?" will be displayed.
2. Press the **◀▶** button to select Yes, then press the **ENTER** button.

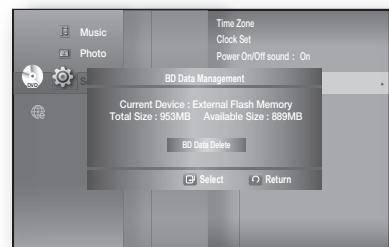

### Description of Device(Storage) Information on the Player

- Total Size : Total size of the Device(Storage).
- Available Size : Available size of the Device(Storage).



- Memory size information on the current device(storage) is located to the right of the BD Data Management menu.
- In the external memory mode, disc playback will be stopped if you disconnect the USB device in the middle of the playback.
- We recommend using an USB device that supports USB 2.0 protocols, FAT32 format and 4MB or more read /write speed.
- The Resume Play function may not work after formatting the storage device.

# System upgrade

Samsung may offer upgrades to your Blu-ray Home Theater's firmware in the future. To upgrade this firmware you must :

1. Go to [samsung.com](http://samsung.com) and refer to the 'SUPPORT' page to download the latest firmware.



You can use a CD-R or a USB flash drive to perform the firmware upgrade. For more information, see "Upgrade Manual" at the website mentioned above.

or


2. Connect the network (see pages 28~29) and follow the steps below.

## FIRMWARE UPGRADE


1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Update**, then press the **ENTER** or **▶** button.

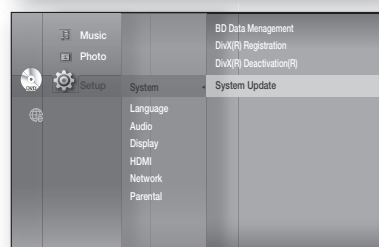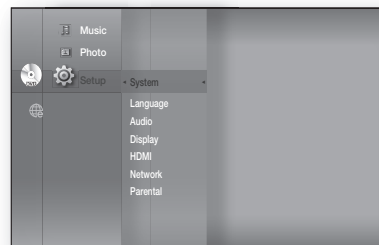


5. The player will check the cable or network connection status automatically. The connection checking window will be displayed.

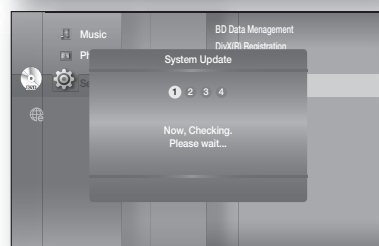

- If the upgrade is possible : You will see information on the current and new versions of firmware in a message box.

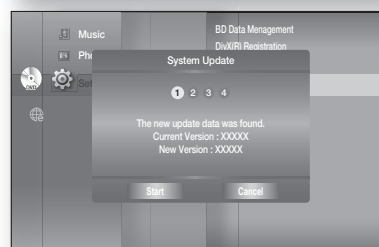

- If the upgrade is not possible : You will see the following description in the message box.
  - If the cable is not connected :  
"Ethernet cable is not connected. Please, check the Ethernet cable"
  - If the network connection has failed :  
"This system can not connect to internet for update. Please, check the network setup"
  - If no latest version is released (the latest version has been already installed) :  
"The latest version of the firmware is already installed. There is no need to update."
  - If there is a disc in the player :  
"Please maintain "No Disc" state for network update." This indicates that you must remove all discs from the unit to perform the update.
  - If the server service is not available :  
"Update Server is under maintenance. Please try again later."

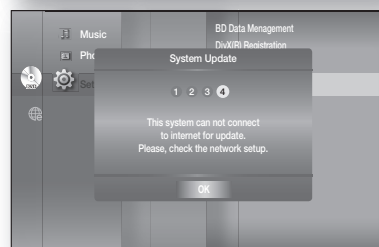

# System upgrade

## FIRMWARE UPGRADE

6. To perform the system upgrade, press the ◀ ▶ buttons to select **Start** and then press the **ENTER** button.

7. The system update gets started.






8. If you select Cancel during the download process, you are prompted to confirm your selection in a message box. If you want to cancel the download, select **Yes** and press the **ENTER** button.

9. Verification will proceed. When download is done, the firmware update process will begin automatically.

10. When the installation is done, the player will automatically turn off in 5 seconds.  
All settings will revert to the factory settings. The next time you start the system and you will see the menu language selection window.



- If you want to cancel the upgrade in the process of downloading the upgrade data, press the **ENTER** button. You will see a confirmation message. Selecting **Yes** will end the upgrade process, and selecting **No** will continue the upgrade process.
- When the system upgrade is done, check the firmware details in the System Upgrade menu.
- Do not turn off the player during the System Upgrade, as it may cause the player to not work properly.
- You must use a USB Flash Drive to do software upgrades using the USB Host jack. Other USB devices(ex. MP3 player) are not guaranteed to work.
- There should be only one firmware upgrade file in USB flash drive for the player to properly perform an upgrade.
- Oversized USB drives may not be able to be inserted when a LAN or HDMI cable is connected.

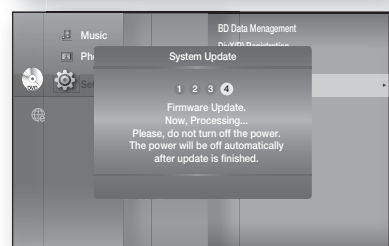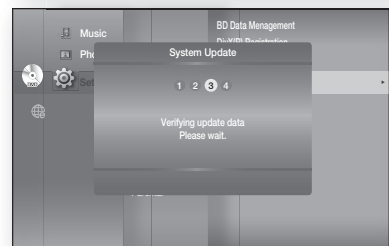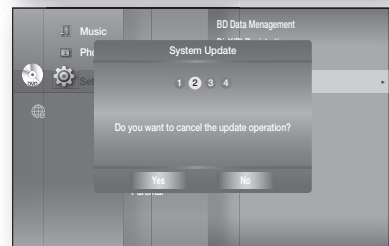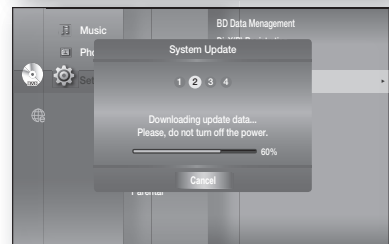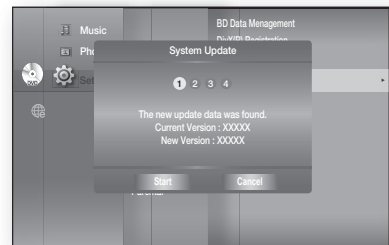

## SYSTEM INFORMATION

When the firmware upgrade is done, check the firmware details by following the steps below.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼◀▶** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Information**, then press the **ENTER** or **▶** button.  
You can see detailed information about the current firmware.
5. Press the **ENTER** button to select **OK**.  
System Setup menu will be displayed.



## FIRMWARE UPGRADE NOTIFICATION

This popup menu appears when a newer firmware version is available from SAMSUNG's update server than what is currently on the Blu-ray Home Theater.

- **Yes** : Select this to upgrade now.
- **No** : Select this if you plan to upgrade later.

## DIVX(R) REGISTRATION

Please use the Registration code to register this Home Theater System with the DivX(R) Video On Demand format. For more information, visit [www.divx.com/vod](http://www.divx.com/vod)




- This option is not activated if you select OK. To activate this option, please activate the DivX(R) Deactivation.

## DIVX(R) DEACTIVATION

If you want to deactivate the registration code on the website, please select Yes. Then, you can get a new registration code.



- This function can be operated when DivX(R) Registration function is available.

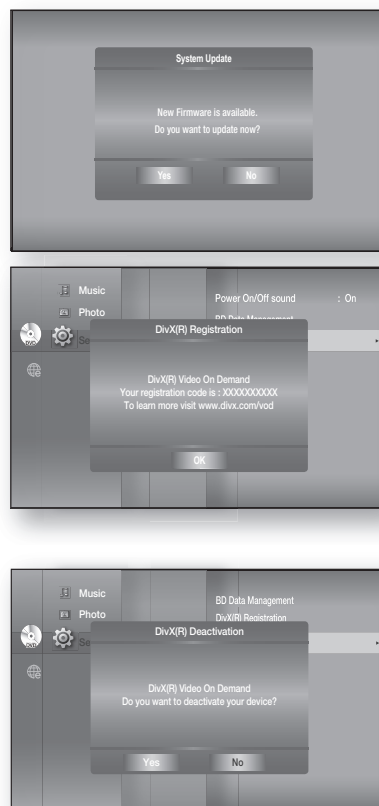


# Watching a movie


## USING THE DISPLAY FUNCTION



1. During playback, press the **INFO** button on the remote control.
  - If the Blu-ray Disc has the PIP feature, press the **INFO** button in the PIP section to display PIP-related information.
2. Press the **▲▼** buttons to select the desired item.
3. Press the **◀▶** buttons to make the desired setup change and then press the **ENTER** button.
  - You may use the number buttons of the remote control to directly access a title, chapter or to start the playback from a desired time.
4. To make the screen disappear, press the **INFO** button again.

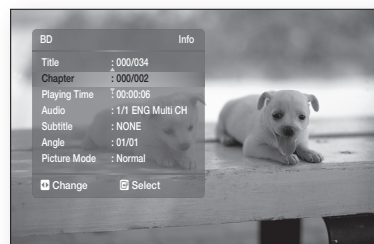

<INFO menu for the PIP section>

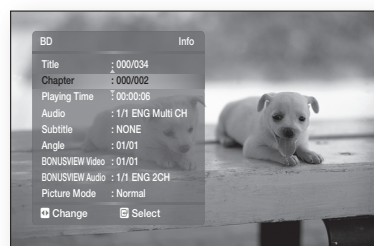


- If you are playing contents from the info menu, some functions may not be enabled depending on the disc.
- Title : To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a Blu-ray Disc/DVD, each movie will be identified as a Title.
- Chapter : Most Blu-ray Disc/DVD discs are recorded in chapters so that you can quickly find a specific chapter.
- Audio : Refers to the film's soundtrack language. A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- Playing Time : Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some discs.
- Subtitle : Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A Blu-ray Disc can contain up to 255 subtitle languages, and a DVD up to 32.
- Angle : When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.
- BONUSVIEW Video/ BONUSVIEW Audio : You can make BONUSVIEW Video or BONUSVIEW Audio settings if the current title of a Blu-ray Disc appears in the PIP section. The BONUSVIEW Video/ BONUSVIEW Audio options, however, will be disabled with a Blu-ray Disc that does not support the PIP feature.
- Picture Mode : This function enables you to adjust video quality when you are connected to a TV via HDMI.
  - Dynamic : Choose this setting to increase Sharpness.
  - Normal : Choose this setting for most viewing applications.
  - Movie : This is the best setting for watching movies.
  - User : The user can adjust the sharpness and noise reduction function respectively.

## USING THE DISC MENU & POPUP/TITLE MENU

### Using the Disc Menu



1. During playback, press the **DISC MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired selection, then press the **▶** or **ENTER** button.
  - The Disc menu setup items may vary from disc to disc.

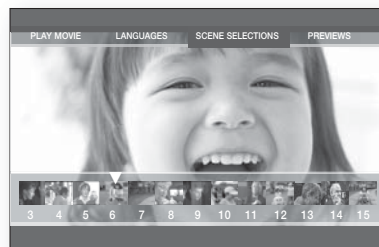

- Depending on the disc, the Disc Menu may not be available.

### Using the Title Menu



1. During playback, press the **TITLE MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired selection, then press the **ENTER** button.
  - The Title menu setup options may vary from disc to disc.




- Depending on the disc, the Title Menu may not be available.
- Title Menu will only be displayed if there are at least two titles on the disc.

### Playing the Title List




1. With the unit in Stop mode/Playback mode, press the **DISC MENU** or **TITLE MENU** button.
2. Press the **▲▼** buttons to select an entry you want to play from Title List, then press the **▶** or **ENTER** button.  
The selected entry (title) will be played back.

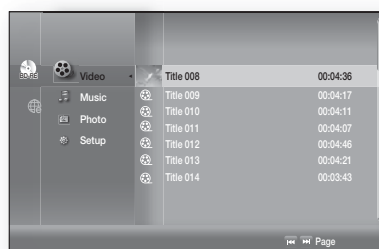

### Using the Popup Menu



1. During playback, press the **POPUP MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons or **ENTER** button to select the desired menu.
  - The Popup menu setup options may vary from disc to disc.

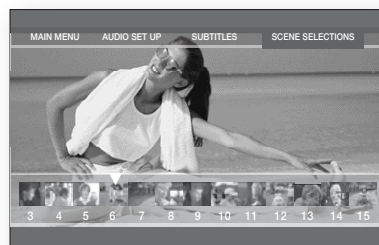

- Depending on the disc, the Popup Menu may not be available.

# Watching a movie


## REPEAT PLAY

Repeat the current chapter or title.

### Repeat playback



1. During playback, press the **REPEAT** button on the remote control. Repeat screen appears.
2. Press the **▲▼** buttons to select **Chapter** or **Title**.
  - Blu-ray Disc/DVD repeats play by chapter or title.
3. To return to normal play, press the **REPEAT** button again, then press the **▲▼** buttons to select **Off**.

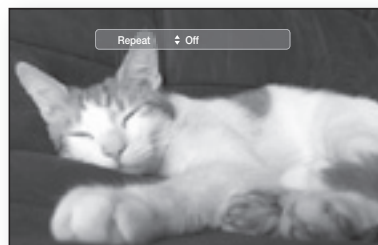


■ Depending on the disc, the Repeat function may not be available.

### Using the A-B Repeat function



1. Press the **REPEAT A-B** button on the remote control during playback.
2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
3. Press the **REPEAT A-B** button at the point where you want repeat play to stop (B).
3. To return to normal play, press the **REPEAT A-B** button again.

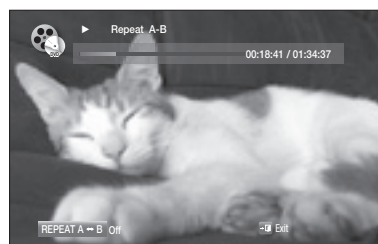

■ Point B cannot be set until 5 seconds of playback has elapsed from point A.



## SELECTING THE AUDIO LANGUAGE




You can select a desired audio language quickly and easily with the **AUDIO** button.

### Using the AUDIO button

1. Press the **AUDIO** button during playback. The Audio changes when the button is pressed repeatedly.
  - The audio languages are represented by abbreviations.
2. To remove the **Audio** bar, press the **RETURN** button.

### Using the INFO button

1. During playback, press the INFO button on the remote control.
2. Press the ▲▼ buttons to select Audio language.
3. Press the ◀▶ buttons on the remote control to select the desired audio language.

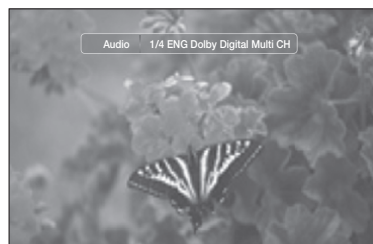

- This function depends on what audio languages are encoded on the disc and may not be available.
- A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- Depending on the disc type, you can use the **AUDIO** button to change the audio soundtrack as well as the audio language. Some Blu-ray Discs may allow you to select either the multi-channel LPCM or Dolby Digital audio soundtrack in English.
- Information about the primary / secondary mode will be also displayed if the Blu-ray Disc has a PIP section. Use the ◀▶ button to switch between primary and secondary audio modes.
- The ◀▶ indicator will not be displayed on the screen if the PIP section does not contain any PIP audio settings.


## SELECTING THE SUBTITLE LANGUAGE

You can select a desired subtitle quickly and easily with the **SUBTITLE** button.

### Using the SUBTITLE button



1. Press the **SUBTITLE** button. The subtitle changes when the button is pressed repeatedly. The subtitle languages are represented by abbreviations.
2. To remove the **Subtitle** bar, press the **RETURN** button.

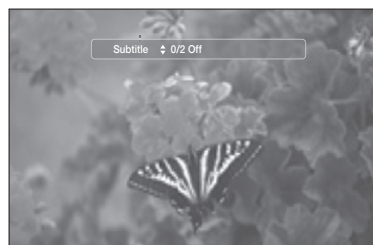

# Watching a movie

---

## SELECTING THE SUBTITLE LANGUAGE

---

### Using the INFO button

1. During playback, press the INFO button on the remote control.
2. Press the ▲▼ buttons to select Subtitle.
3. Press the ◀▶ buttons on the remote control to select the desired subtitle language.



- Depending on the Blu-ray Disc / DVD, you may be able to change the desired subtitle in the Disc Menu. Press the **DISC MENU** button.
- This function depends on what subtitles are encoded on the disc and may not be available on all Blu-ray Discs/DVDs.
- A Blu-ray Disc can contain up to 255 subtitle languages and a DVD up to 32.
- Information about the primary / secondary mode will be also displayed if the Blu-ray Disc has a PIP section.
- This function changes both the primary and secondary subtitles at the same time.
- The total number of subtitles is the sum of the primary and secondary ones.

## CHANGING THE CAMERA ANGLE


---

When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

### Using the ANGLE function



1. During playback, press the **INFO** button on the remote control.
2. Press the ▲▼ buttons to select **Angle**.
3. Press the ◀▶ buttons or you can use the number buttons on the remote control to select the desired angle.

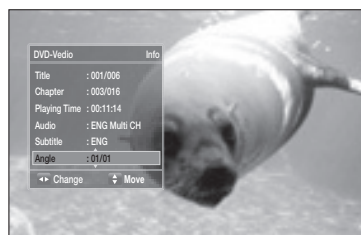

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- Depending on the disc, these functions may not work.

## PIP (PICTURE IN PICTURE) SETTINGS

The PIP feature allows you to view additional content (such as commentaries) in a small screen window while the movie is playing.



### Using the PIP button

1. If the current Blu-ray Disc features the PIP function, you can use the **PIP** button to turn **PIP On** or **Off**.
2. Each time you press the **PIP** button, you can toggle between **PIP On** and **PIP Off**.



- You can change detailed settings of the PIP feature in the INFO menu (see page 58: selection of secondary audio, video stream and subtitle etc.).
- If you switch from BONUSVIEW Video, BONUSVIEW Audio will change automatically in accordance with BONUSVIEW Video.
- If the Blu-ray Disc supports only BONUSVIEW Audio, you can just press the PIP button to turn the secondary audio on or off.

## BD-LIVE™

The Blu-ray Home Theater supports BD-LIVE which enables you to enjoy a variety of interactive service contents provided by the disc manufacturer through network connection.

### Using the BD-LIVE Disc

1. Connect the network (see pages 28~29) and check the network setup (see pages 53~57).
2. Insert a Blu-ray disc that supports BD-LIVE.
3. Select the contents provided by the disc manufacturer to enjoy the BD-LIVE.



- The way you use BD-LIVE and the features may differ, depending on the disc.
- To use BD-LIVE, you must insert a minimum 1GB USB memory device into one of the USB slots.

# Watching a movie

## DIVX, MKV, MP4 PLAYBACK


The functions discussed on this page apply to DivX, MKV, MP4 disc playback only.

### Skip Forward/Back

DivX  
MKV  
MP4

During playback, press the **◀◀**, **▶▶** button.

- Goes to the next file whenever you press the **▶▶** button, if there are over 2 files on the disc.
- Goes to the previous file whenever you press the **◀◀** button, if there are over 2 files on the disc.

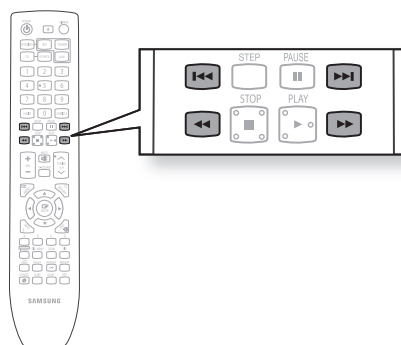

### Fast Playback

DivX  
MKV  
MP4

During playback, press the **◀◀**, **▶▶** button.

To play back the disc at a faster speed, press the **◀◀** or **▶▶** button during playback.

- Each time you press either button, the playback speed will change as follows:


**2x → 4x → 8x.**

### Audio Display

DivX  
MKV  
MP4

Press the **AUDIO** button.

- If there are multiple audio languages on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between **AUDIO (1/N, 2/N ...)**.

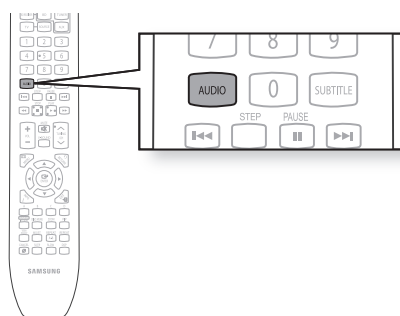


### Subtitle Display

DivX  
MKV  
MP4

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between **SUBTITLE (1/N, 2/N ...)** and **SUBTITLE OFF**.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DivX discs.

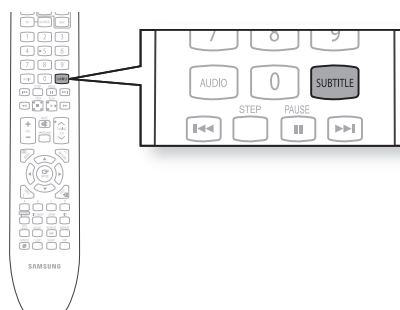

## DivX(Digital internet video express)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that you can watch a movie at near DVD-quality video and audio.

### 1. Supported Formats

This product only supports the following media formats. If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

#### Supported Video Formats

Format	AVI
Supported Versions	DivX3.11 ~ DivX5.X, XviD

#### Supported Audio Formats

Format	MP3	AC3
Bit Rate	56 ~ 320 kbps	128 ~ 384 kbps
Sampling Frequency	32 ~ 48 kHz	44.1/48 kHz

- This product supports up to 1920 x 1080 pixels.
- When you play a disc whose sampling frequency is higher than 48 kHz or 320 kbps, you may experience shaking on the screen during playback.
- Qpel and gmc is not supported.

### 2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (\*.smi) in the same file name as that of the DivX media file (\*.avi) within the same folder.  
Example. Root      Samsung\_007CD1.avi  
                         Samsung\_007CD1.smi

- ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.



ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

DivX Certified plays DivX video up to HD 1080p, including premium content

## MKV, MP4


- CD-R/-RW, DVD-R/-RW, USB, PC streaming
- Video Files with following extensions can be played. : .avi, .divx, .mkv, .mp4, .AVI, .DIVX, .MKV, .MP4



- Some DivX, MKV and MP4 format discs may not play, depending on the video resolution and frame rate condition.

# Listening to music

## BUTTONS ON THE REMOTE CONTROL USED FOR AUDIO CD (CD-DA)/ MP3 DISC PLAYBACK

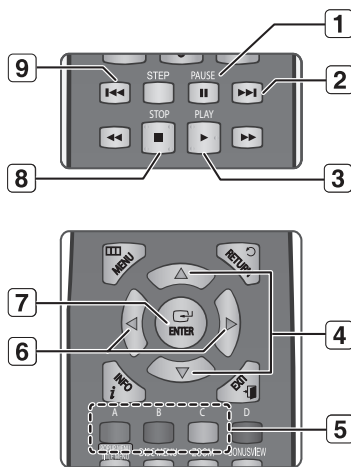

1. PAUSE button : Pauses playback.
2. SKIP ( ) button : During playback, moves to the next page in the Music List or moves to the next track in the Playlist.
3. PLAY button : Plays the currently selected track.
4. ▲▼ buttons : Selects a track(song) in the Music List or Playlist.
5. COLOR buttons
  - RED(A) button : Selects the Play Mode(Repeat) during playback.
  - GREEN(B) button : Go to Playlist from Music List.
  - YELLOW(C) button : Playlist play.
6. ◀▶ buttons
  - ◀ : Plays the applicable track, according to the current position.
  - ▶ : Moves to the menu.
7. ENTER button : Plays the selected track (song).
8. STOP button : Stops a track(song).
9. SKIP ( ) button : If you pressed this button after three seconds of playback, the current track will be replayed from the beginning. But, if you pressed this button within three seconds after playback starts, the previous track will be played.  
Used to move to the previous page in the Music List or Playlist.

## REPEAT AUDIO CD(CD-DA) & MP3

During playback, press the **REPEAT** or **RED(A)** button repeatedly to select the repeat mode you want.

When playing an Audio CD(CD-DA) : → → →

When playing an MP3 disc : → → →

- Normal (Audio CD(CD-DA)/MP3): Tracks on a disc are played in the order in which they were recorded on the disc.
- Repeat Track (Audio CD(CD-DA)/MP3)
- Repeat Folder (MP3)
- Random (Audio CD(CD-DA)/MP3)
  - When playing an Audio CD(CD-DA): The random option plays a disc's tracks in random order.
  - When playing an MP3 disc : The random option plays a folder's file in random order.
- Repeat All (Audio CD(CD-DA)): All tracks are repeated.



- To return to normal playback -

Press the **REPEAT** or **RED(A)** button repeatedly to return to normal playback.


# PLAYING AN AUDIO CD(CD-DA)/MP3



1. Insert an Audio CD(CD-DA) or an MP3 Disc into the disc tray.
  - For an Audio CD, the first track will be played automatically.
  - For an MP3 disc, press the ▲▼◀▶ buttons to select **Music**, then press the **ENTER** button.  
(You can listen to mp3 files using a USB storage device)
2. To move to the Music List, press the **STOP** or **RETURN** button.  
The Music List screen is displayed on your TV.
3. Press the ▲▼ buttons to select the track you want to play, then press the **ENTER** button.

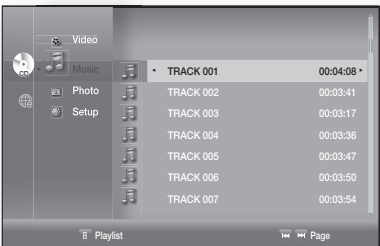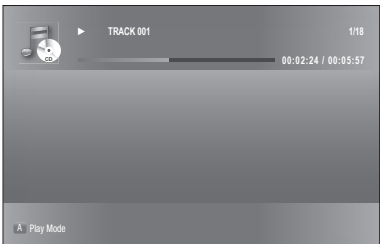

## ❖ Audio CD(CD-DA)/MP3 Screen Elements

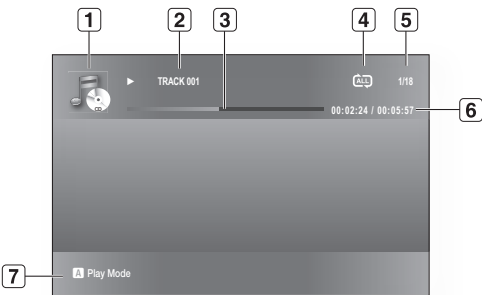

1	Displays the media type.
2	Current track (song) Displays the number of the track currently being played.
3	Play Status Bar.
4	Displays the repeat status.
5	Displays the current play index, total track number.
6	Current /Total Play Time.
7	Displays available <b>COLOR</b> buttons.




# Listening to music

## Playlist



You can create a playlist with up to 99 tracks.

1. Insert an Audio CD(CD-DA) or an MP3 Disc into the disc tray.
  - For an Audio CD, the first track will be played automatically.
  - For an MP3 disc, press the **▲▼◀▶** buttons to select **Music**, then press the **ENTER** button.  
(You can listen to mp3 files using a USB storage device)
2. To move to the Music List, press the **GREEN(B)** or **RETURN** button.  
The Music List screen is displayed.
3. Press the **GREEN(B)** button to go to the Playlist.
4. Press the **▲▼** buttons to select a track, then press the **ENTER** button to add it to the Playlist. Repeat this procedure to add additional tracks.
5. If there is an undesired track in the playlist, press the **▶▲▼** button to select that track, and then press the **ENTER** button.
  - The selected track will be deleted.
6. Press the **YELLOW(C)** button to play the selected tracks.  
When the track is finished, the next track will automatically play.
7. To edit the Playlist, press the **STOP** or **RETURN** button.
8. To go to the Music List, press the **RETURN** button.

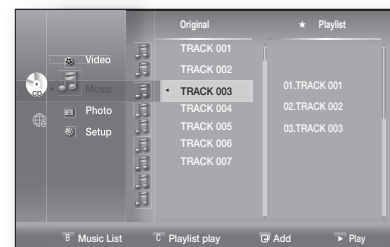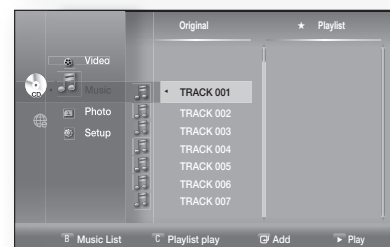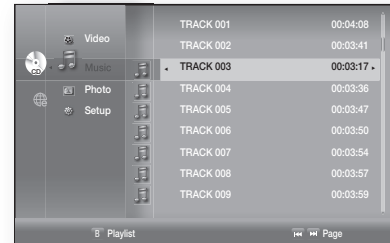


## MP3 & JPEG Simultaneous playback



You can enjoy listening to MP3 files while you simultaneously view JPEG files.

1. When you play MP3 file, press the **BLUE(D)** button.  
The slide show speed screen will be displayed.
2. Select the desired slide show speed.

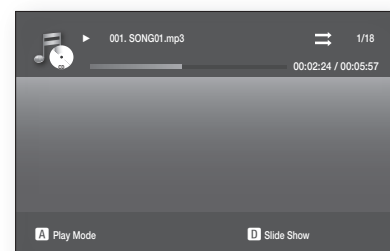


- To operate this function, you have to select the folder containing both music and photo files.
- When you play MP3 and JPEG files simultaneously, audio drop may occur according to bitrate of MP3, size of JPEG image and method of encoding.



# Viewing a picture

## VIEWING A PICTURE

1. Insert a JPEG disc into the Disc Slot.
  - The Menu screen is displayed.
2. Press the **▲▼◀▶** buttons to select **Photo**, then press the **ENTER** button.
  - The Photo List is displayed.
3. Press the **▲▼** buttons to select a picture.
  - To see the next page, press the SKIP (**▶▶**) button.
  - To see the previous page, press the SKIP (**◀◀**) button.

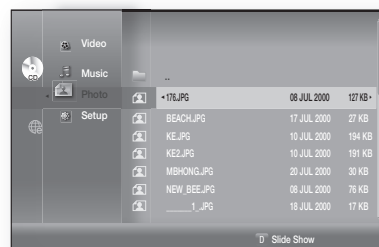

## SLIDE SHOW/SPEED



To setup, follow steps 1 and 2 above.

3. Press the **BLUE(D)** button.
  - The slide show starts.
4. When the SlideShow starts, press the **BLUE(D)** button to adjust the play speed.
  - Each time you press the button, the play speed will increase accordingly.



### - To stop the Slide Show -



Press the **STOP** or **RETURN** button.

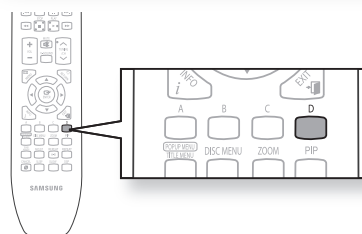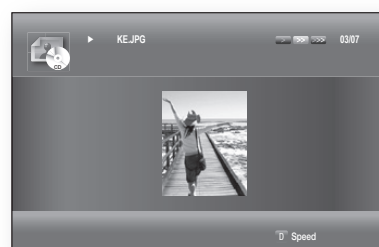

## ROTATE

To setup, follow steps 1 and 3 above.

4. Press the **ENTER** button.
5. Use the **RED(A)** and **GREEN(B)** buttons to rotate the image in a desired direction.

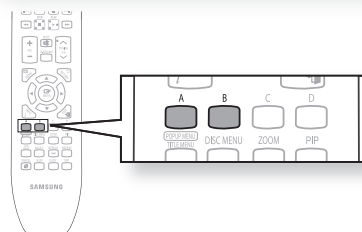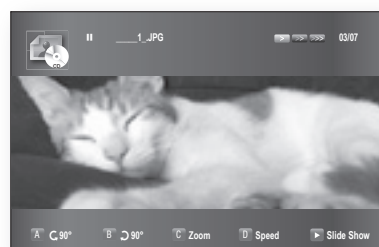

# Viewing a picture

## ZOOM

To setup, follow steps 1 to 3 in "Viewing a Picture" on page 69.

4. Press the **ENTER** button.

5. Press the **YELLOW(C)** button.




6. Use the **YELLOW(C)** or **ZOOM** button to zoom the image in/out.

### - To move the area -

Press the **▲▼◀▶** buttons to the area you want to enlarge.

### - To stop the Zoom -

Press the **YELLOW(C)** button.

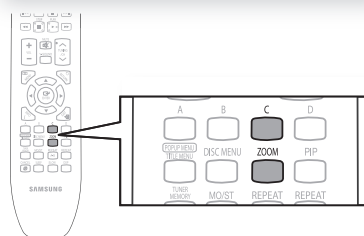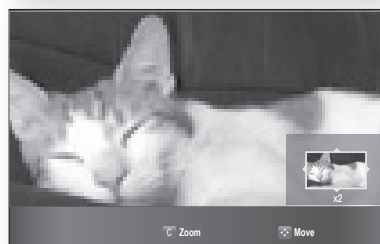
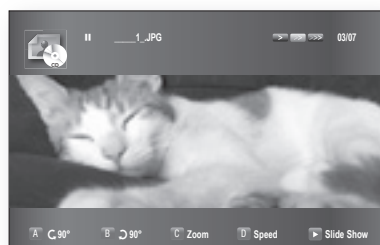


## GO TO PHOTO LIST

To setup, follow steps 1 to 3 in "Viewing a Picture" on page 69.

4. Press the **ENTER** button.

5. To go Photo List, press the **RETURN** or **STOP** button.

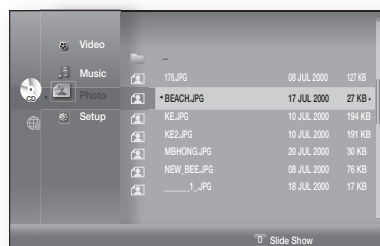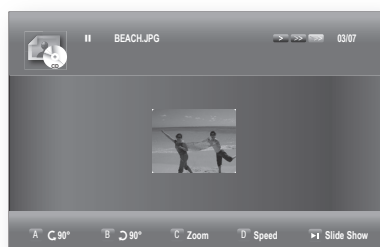


# Using the USB function

## PLAYING MEDIA FILES USING THE USB HOST FEATURE

You can enjoy media files such as pictures and music saved on an MP3 player, USB memory stick or digital camera.

1. Connect the USB device to the USB port on the side of the unit.
2. **USB Connected** appears on the display screen and then disappears.
3. USB icon is displayed on the Setup Menu.

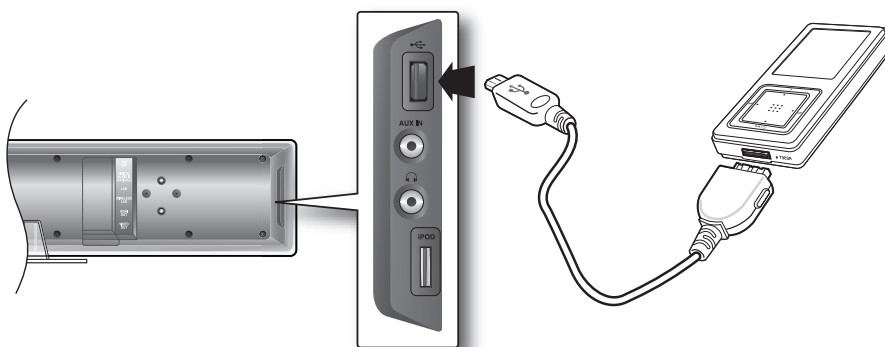

## Safe USB Removal


To prevent damage to the data stored in the USB device, perform safe removal before disconnecting the USB cable.

- Press the **YELLOW(C)** button. The display will show **Now**. You can remove USB safely.
- Remove the USB cable.

## Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- When there is more than one file and you press the **⏭** button, the next file is selected.
- When there is more than one file and you press the **⏮** button, the previous file is selected.

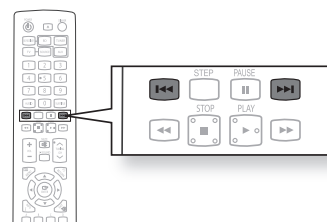

# Using the USB function

## USB Host Specification

<b>USB Host Specification</b>	<ul style="list-style-type: none"><li>• Supports USB 1.1 or USB 2.0 compliant devices.</li><li>• Supports devices connected using the USB A type cable.</li><li>• Supports UMS (USB Mass Storage Device) V1.0 compliant devices.</li><li>• Supports the device of which the connected drive is formatted in the FAT(FAT, FAT16, FAT32) file system.</li></ul>
<b>Non-compliance</b>	<ul style="list-style-type: none"><li>• Does not support a device that requires installing a separate driver on the PC (Windows).</li><li>• Does not support connection to a USB hub.</li><li>• A USB device that is connected using the USB extension cable may not be recognized.</li><li>• A USB device requiring a separate power source needs to be connected to the player with the separate power connection.</li></ul>
<b>Operational Limitations</b>	<ul style="list-style-type: none"><li>• If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected.</li><li>• A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device.</li></ul>

## USB Devices that can be used with the Home Theater

1. USB Storage Device
2. MP3 Player
3. Digital Camera
4. Removable HDD
  - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
  - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The connector of the USB cable may differ, depending on the manufacturer of the USB device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
  - Depending on the manufacturer, the USB card reader may not be supported.
  - If you install multiple memory devices into a multi card reader, you may experience problems.

## Supported file Formats


Format	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
<b>Still Picture</b>	JPG	JPG .JPEG	—	—	640x480	—
<b>Music</b>	MP3	.MP3	80~384kbps	—	—	44.1kHz

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.

# Radio

## LISTENING TO RADIO

1. Press the **TUNER** button to select the FM band.
2. Tune in to the desired station.
  - Automatic Tuning 1 : When the **SKIP** (⏮ ⏭) button is pressed, a preset broadcast station is selected.
  - Automatic Tuning 2 : Press and hold the **TUNING/CH** (↗ ↘) button to automatically search for active broadcasting stations.
  - Manual Tuning : Briefly press the **TUNING/CH** (↗ ↘) button to increase or decrease the frequency incrementally.

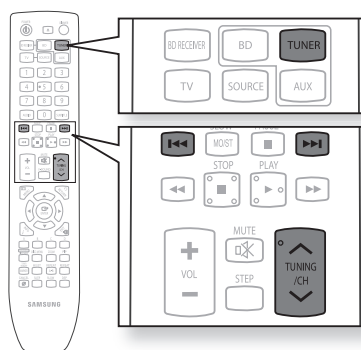


### Main Unit

1. Press the **FUNCTION** button to select the FM band.
2. Select a broadcast station.
  - Automatic Tuning 1 : Press the **STOP** (■) button to select **PRESET** and then press the **SKIP** (⏮ ⏭) button to select the preset station.
  - Automatic Tuning 2 : Press the **STOP** (■) button to select **MANUAL** and then press and hold the **SKIP** (⏮ ⏭) button to automatically search the band.
  - Manual Tuning : Press the **STOP** (■) button to select **MANUAL** and then briefly press the **SKIP** (⏮ ⏭) button to tune in to a lower or higher frequency.

### Mono/Stereo

Press the **MO/ST** button to listen in Mono/Stereo.


- Each time the button is pressed, the sound switches between **STEREO** and **MONO**.
- In a poor reception area, select **MONO** for a clear, interference-free broadcast.

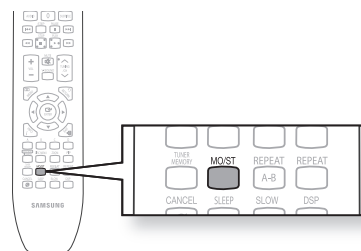

## PRESETTING STATIONS

Example : Presetting FM 89.10 in the memory

1. Press the **TUNER** button to select the FM band.
2. Press the **TUNING/CH** (↗ ↘) button to select <89.10>.
3. Press the **TUNER MEMORY** button.
  - **NUMBER** flashes in the display.
4. Press the **SKIP** (⏮ ⏭) button to select preset number.
  - You can select between 1 and 15 presets.
5. Press the **TUNER MEMORY** button again.
  - Press the **TUNER MEMORY** button before **NUMBER** disappears from the display.
  - **NUMBER** disappears from the display and the station is stored in memory.
6. To preset another station, repeat steps 2 to 5.
  - To tune in to a preset station, press the **SKIP** (⏮ ⏭) button on the remote control to select a channel.

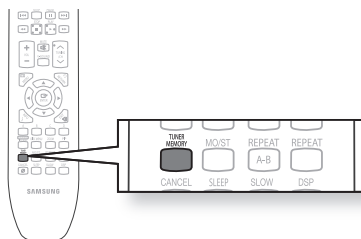




# Using an iPod

You can enjoy playback of your iPod using the supplied remote control.


## LISTENING TO MUSIC

You can play music files stored in the iPod player by connecting it to the Blu-ray Home Theater.

1. Connect the iPod dock connector to the iPod jack on the Blu-ray Home Theater.
2. Place the iPod in the Dock.
  - Your iPod is automatically turned on.
  - "iPod Connected" message appears on the TV screen.
3. Press the **MENU** button on the remote control.
4. Press the **▲▼◀▶** buttons on the remote control to select iPod mode.
5. Press the **▲▼◀▶** buttons on the remote control to select **Music** and press the **ENTER** button.
  - The **Music** categories appear.
6. Press the **▲,▼** buttons desired category and press the **ENTER** button.
  - The music list appears on your TV.
7. Press the **▲,▼** buttons to select the music file to play and press the **ENTER** button.
  - The music will start with a new screen which shows the song title, time, artist, and progress bar.
8. You can use the remote control or main unit to control simple playback functions such as **PLAY**, **PAUSE**, **STOP**, **◀▶**, **◀◀**, **▶▶** and **REPEAT**.
  - Press the **RED(A)** button to select a desired play mode.

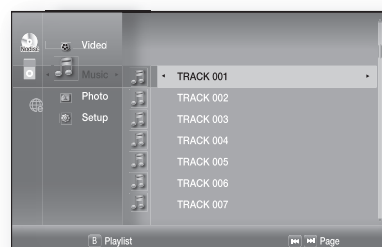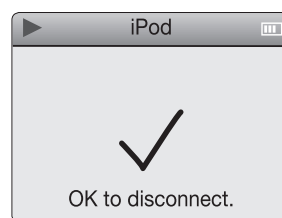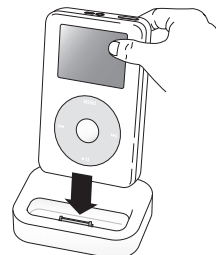

### ❖ iPod Playback Screen Elements

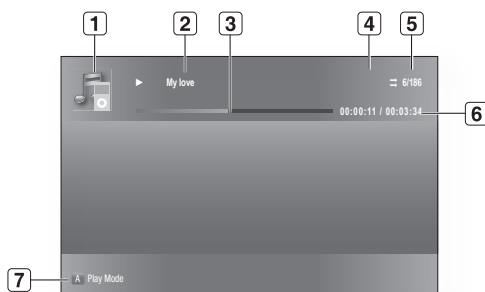

1	Displays the media type.
2	Current track (song) Displays the number of the track currently being played.
3	Play Status Bar.
4	Displays the repeat status.
5	Displays the current play index, total track number.
6	Current /Total Play Time.
7	Displays available <b>COLOR</b> buttons.

To move to the Music List and select a track:

1. Press the **MENU** or **STOP** button.
  - It stops playing and returns to the music list.
2. Press the **▲**, **▼** buttons to select the file you want to play and press the **ENTER** button.
  - Press the **RETURN** or **◀** button to return to the parent menu.

## iPod Music categories

File information including the artist name, album name, music title and genre will be displayed according to the ID3 Tag information on the appropriate music file.

**Now Playing** : Plays a recently played file or moves to the playback screen of the current file.

**Artists** : To play by artist.

**Songs** : To play in numeric or alphabetical order

**Playlists** : To play by Playlist.

**Albums** : To play by album.

**Genres** : To play by genre.

**Composer** : To play by composer.





- See page 24 for compatible iPods.  
Compatibility depends on the software version of your iPod.
- The category list may differ, depending on the iPod model.
- **What is an ID3 Tag?**  
This is what is attached to an MP3 to carry information relevant to the file such as the title, artist, album, year, genre and a comment field.
- When the i-Pod is put into the i-Pod Dock, the Shuffle function does not work.

# Using an iPod

## WATCHING A MOVIE


You can play video files stored in the iPod player by connecting it to the Blu-ray Home Theater.

1. Connect the iPod dock connector to the iPod jack on the Blu-ray Home Theater.
2. In the iPod screen, move to **Videos > Settings** and set the **TV Out** option to **On**.
3. Place the iPod in the Dock.
  - “iPod Connected” message appears on the TV screen.
4. Press the **▲▼◀▶** buttons on the remote control to select iPod mode.
5. Press the **▲▼◀▶** buttons on the remote control to select **Video** and press the **ENTER** button.
6. Press the **▲,▼** buttons on the remote control to select **Movies** and press the **ENTER** button.
  - The video list appears on your TV.
7. Press the **▲,▼** buttons to select the video file to play and press the **ENTER** button.
  - Video file of the iPod player will be played on the TV screen.
8. You can use the remote control or main unit to control simple playback functions such as **PLAY, PAUSE, STOP**, **◀◀ / ▶▶** and **◀▶ / ▶▶**.
  - If you press the **PREV** button within 2 seconds after playback of the video file begins, the player will play the previous file.
  - If you press the **PREV** button 2 seconds or later playback begins, the player will move to the start screen of the current file.
  - Press the **NEXT** button to play the next file.

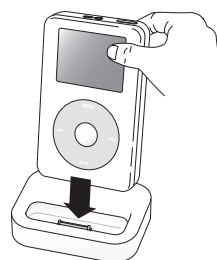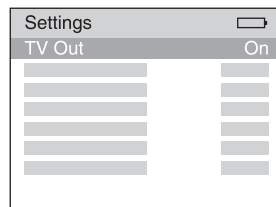

To move to the Video List and select a file:

1. Press the **MENU** or **STOP** button.
  - It stops playing and returns to the video list.
2. Press the **▲,▼** buttons to select the file you want to play and press the **ENTER** button.
  - Press the **RETURN** or **◀** button to return to the parent menu.

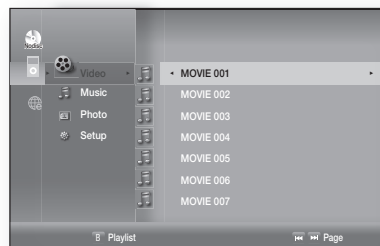

- See page 24 for compatible iPods. Compatibility depends on the software version of your iPod.
- You must have the VIDEO output connected to your TV to view iPod video (See page 23).
- If HDMI CEC is set to on, turn it off.
- No other screen than the playback one will appear on the TV screen. Check other screens on the iPod player.
- If connected iPod does not support video playback, “Cannot play video files saved on this iPod” message appears when you select the Video menu.



# PC streaming function

## CONNECTING TO A PC AND PLAYING MP3, JPEG, DIVX, MKV AND MP4 CONTENT

The shared folder setup method may be different, depending on the PC operating system.

You can connect the Blu-ray Home Theater to a PC and play mp3, jpeg, DivX, MKV and MP4 file content in a shared folder. (Refer to pages 28~29 for the connection)

1. Use a router and LAN cable or wireless LAN adapter to connect between the PC and Blu-ray Home Theater.
2. Create a shared folder in the PC and store desired mp3, jpeg, DivX, MKV and MP4 files there.  
- For more detailed information about setting a shared folder, visit the Samsung website and download the "Setting the shared folder" manual from the Download center.

3. Press the **MENU** button.

4. Press the **RED(A)** button.

You will see a window where you can select a network search type.

5. Use the ◀ ▶ button to select a network search type.

A list of shared servers will appear.

- **Auto** : Automatically searches for an available PC.
- **Manual** : You must enter the IP address, folder name, windows user name and password before you can find a desired PC.

### 6. To search a shared folder

There are 2 methods to access shared folders on a PC.

(If you search a folder in Auto mode, it must contain less than 12 characters. You must select manual to search for folders with 12 or more characters.)






#### • Auto Mode

1. Press the ▲ ▼ button to select a desired PC and press the **ENTER** button.

(When first connected, you must enter the window user name and password to display the shared folder.)

2. Enter the PC's user name in the window.


3. Enter the PC's password in the window.  
The shared folder will be displayed.

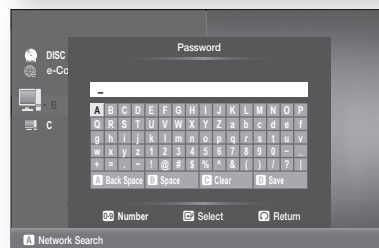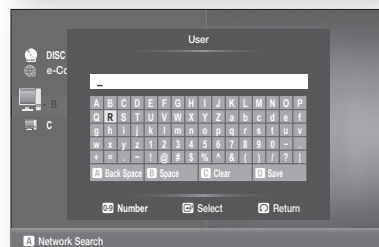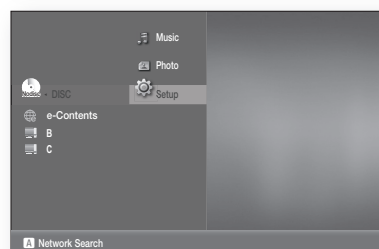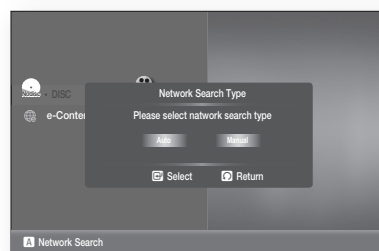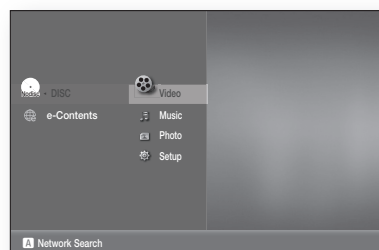

# PC streaming function


## CONNECTING TO A PC AND PLAYING MP3, JPEG, DIVX, MKV AND MP4 CONTENT

4. Press the ▲▼ button to select a desired folder.

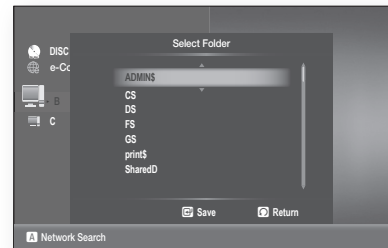


### • Manual Mode


1. Enter in the IP address of the PC that has the shared folders.

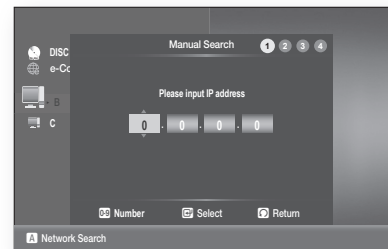

2. Type in the name of the shared folder in the window then press the **BLUE (D)** button to Save.

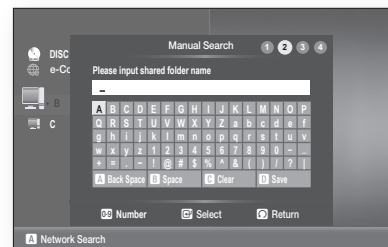

3. Type in the PC's password then press the **BLUE (D)** button to Save.

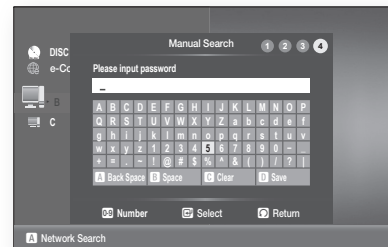

7. Press the ► button, then press the ▲▼ button to select Video, Music or Photo.  
(For playing a Video, Music or Photo, refer to pages 58~70)



- The PC name should be in English, excluding characters such as symbols.
- You can search up to 4 PCs connected to the network to play content over.
- You may experience connection problems depending on your PC environment.
  - If you encounter a problem with "Auto Mode", please try to "Manual Mode".
- If a conflict occurs between Windows XP simple file sharing and the PC streaming function of the Blu-ray Home Theater, please disable the simple file sharing.
  - For more detailed information, visit the Samsung website and download the "Setting the shared folder" manual from the Download center.
- If you experience PC streaming function problems when using a shared folder on the desktop of windows vista, visit the operating system's technical support site to change a setting or change the directory.

# Using the e-contents

With this Blu-ray Home Theater, you can use the e-Contents service (YouTube, for example) via the network. After performing the network connection (see pages 28~29), check the network setup (see pages 49~53).





- According to company policy, the specifications are subject to change.
- e-Content video playback may pause, stop or buffer, depending on your broadband speed.

## USING BLOCKBUSTER

This Blu-ray Home Theater enables you to use the following services provided by Blockbuster.


1. With the unit in Stop mode/No Disc mode, press the **RED(A)** button.
  - **Movies** : Display movies.
  - **TV Shows** : Display TV Shows.
  - **Find** : Search for a desired movie or TV show by entering it manually.
  - **My Library** : Display a title that you bought or rented.
  - **My Favorites** : Displays a title that has been added to My Favorites.
  - **Configure** : Activate or deactivate the Blu-ray Home Theater.
  - **Help** : Get customer service contact information and check the current software version.
2. If you don't have a Blockbuster account yet, visit [www.blockbuster.com](http://www.blockbuster.com) to create your account.
3. Press the **▲, ▼, ◀, ▶** button to select the **Configure**, then press the **ENTER** button.
4. Enter the activation code that is created by the web site, then press the **ENTER** button to select **Activate**.  
When the Blu-ray Home Theater is activated, you will move to the Home page.
5. Press the **◀ ▶** button to select the **Movies** or **TV shows**, then press the **ENTER** button.

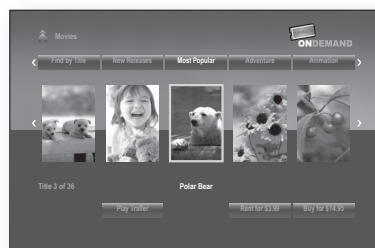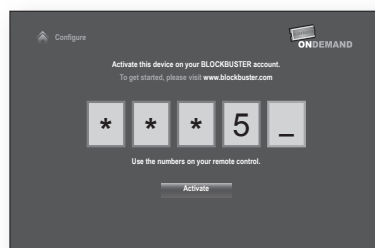


# Using the e-contents

## USING BLOCKBUSTER

6. Press the **▲▼◀▶** button to select the desired title, then press the **ENTER** button.

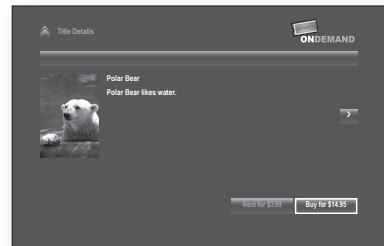

7. Press the **◀▶** button to select the **Rent** or **Buy**, then press the **ENTER** button.

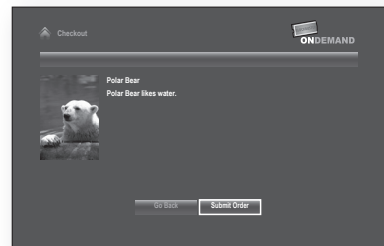

8. Press the **◀▶** button to select the **Submit Order**, then press the **ENTER** button. If you want to play any of the titles that you bought, simply click **Play Now**.




- Depending on the title, some buttons (rent or buy, etc.) may become inactive. For more detailed information, visit [www.blockbuster.com](http://www.blockbuster.com).
- Press the **EXIT** button to exit the Blockbuster. During playback, **EXIT** button is not available.

## USING NETFLIX

This Blu-ray Home Theater enables you to use the following services provided by Netflix.



1. With the unit in Stop mode/No Disc mode, press the **GREEN(B)** button.

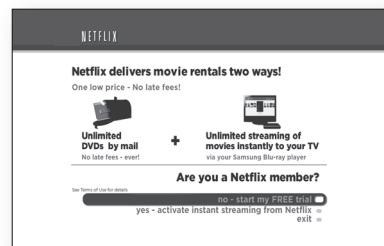

2. If you don't have an account, select "no-start my FREE trial" and subscribe to <http://netflix.com/samsung> from your computer. A user with an existing account can select the "yes-activate instant streaming from Netflix".



3. If you have an existing account, you will see the next window if **Yes** was selected. Select "I'm now a member".

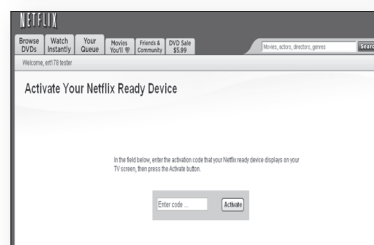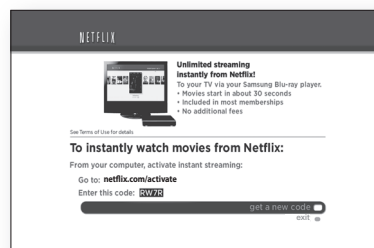

- Video quality of the Netflix contents (SD or HD) depends on the network speed and the original bit rate.
- In order to activate your Blu-ray Home Theater with Netflix, visit the [www.netflix.com/samsung](http://www.netflix.com/samsung) and then enter the activation code.

4. To add a movie to the Instant Queue list of this Blu-ray Home Theater, select the "Add to Instant" button on the Netflix "Watch Instantly" web page using your PC.




5. Movies you added to the Instant Queue from the web are listed.

Press the **ENTER** button of the remote control and select a movie to display the next screen.

- To add a movie in the Instant Queue list of this Blu-ray Home Theater, select "Add to Instant" button on "Watch Instantly" page of Netflix web site using your PC.




6. Press the **PLAY** button to start playback, and the initial buffering of the streamed data is shown.

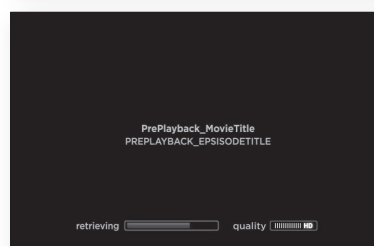

# Using the e-contents

## USING NETFLIX

7. Press the search button (◀/▶) to select a scene of your choice.
  - To stop the movie or go to the instant movie list, press the upper arrow key or press Stop.

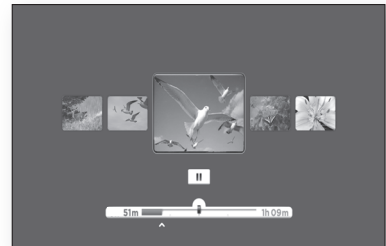


- For more information on the Netflix Instant Streaming feature visit <http://www.netflix.com/help/tv> or login to your Netflix account and click "Help" at the top of the page.


## USING PANDORA

Pandora provides music personalized to your taste.

1. With the unit in Stop mode/No Disc mode, press the **YELLOW(C)** button.
2. To run Pandora, you need to input the activation code at <http://www.pandora.com/samsung> page with your PC. After inputting the activation code, you may have to create a new account if you don't have one yet. If you already have an account, you can use the existing account.


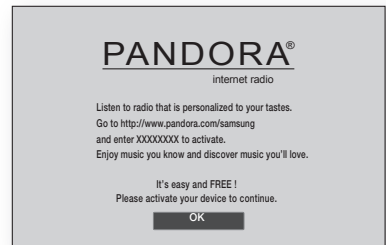


3. It automatically shows the list of stations created from the web or Home Theater, and plays music.

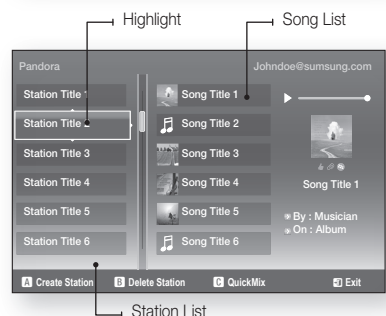


4. Press the **RED(A)** button while the highlight is on the station list to display the create station window.

5. Enter the keyword and press the **BLUE(D)** button to display the search result.  
(The station keyword should be enter music genre, artist, music title, etc.)

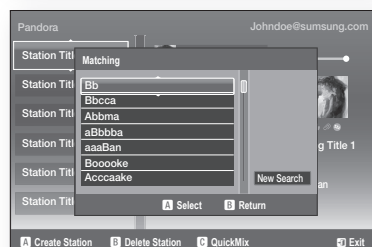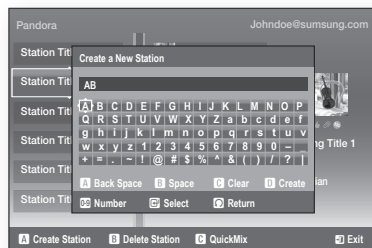


6. Press the **GREEN(B)** button while the highlight is on the station list to delete the selected station.

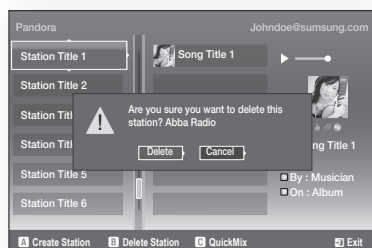

7. You can edit your song list by using the color buttons on the remote control while the highlight is on the song list.

- **RED(A)** : Thumbs Up. By indicating your preference to the server, it plays more songs you love.
- **GREEN(B)** : Thumbs Down. By indicating your dislike to the server, it plays fewer songs you don't like.
- **YELLOW(C)** : Bookmark. It bookmarks the selected song.
  - Once bookmarked with this Blu-ray Home Theater, you can find those songs from [www.pandora.com](http://www.pandora.com) using your account and various additional services provided by Pandora web service using your PC.
- **BLUE(D)** : Sleep Song. It excludes the selected song from the station for a month.

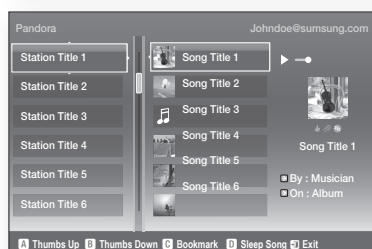

- The [www.pandora.com](http://www.pandora.com) server reflects the changes made on your Home Theater.
- In order to activate your Blu-ray Home Theater with Pandora, visit the [www.pandora.com/samsung](http://www.pandora.com/samsung) and then enter the activation code.
- For further information on Pandora service or to unsubscribe the Pandora service, email "[samsung-support@pandora.com](mailto:samsung-support@pandora.com)".


# Using the e-contents

## USING YOUTUBE

This Blu-ray Home Theater enables you to use the following services provided by YouTube.

1. With the unit in Stop mode/No Disc mode, press the **BLUE(D)** button.

### ❖ YouTube screen elements

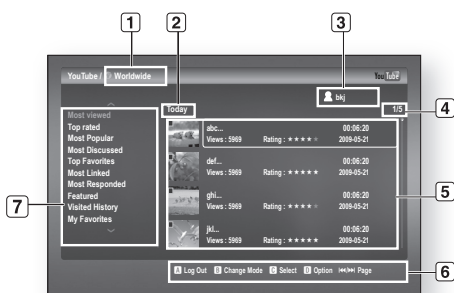

1	Country Selection Information: Shows a country that you selected.
2	Current sorting time: Shows a title list sorted by Time. (Today, Weekly, Monthly, All)
3	User Information: Only shown when logging in.
4	Number of page: The page number of selected title / Total pages in current list.
5	Contents List: Shows a Title, Number of views, Ratings, Runtime and Date.
6	Navigation Help: Shows available buttons.
7	Category List: For more detailed information, please refer to below.

### Category List


Most Viewed	Shows the most viewed videos.
Top Rated	Shows the highest rated videos.
Most Popular	Shows a list of popular videos.
Most Discussed	Shows the most discussed videos.
Top Favorites	Shows the videos that are most added to user's Favorites.
Most Linked	Shows the videos that are most linked to other web sites.
Most Responded	Shows the videos that are most responded by web users.
Featured	Shows a list of featured videos.
Visited History	Shows a history of visited videos.
My Favorites	If you have logged into your YouTube account with the Blu-ray Home Theater and added a video to My Favorites, you can play the video on the Blu-ray Home Theater or a PC that is synchronized with the YouTube site.
Player Library	You can add videos to the Player Library without logging into your YouTube account.
Search	Select search criteria, and enter a keyword for the video you want to play.
Country Setup	Shows a list of videos for a desired country.
Account Management	Enables you to manage YouTube user names and passwords.



## Country Setup

If you select a country in Country Setup, you can view videos from the YouTube site of that country.


1. Press the **▲▼** button to select the **Country Setup**, then press the **ENTER** button.
2. Press the **▲▼◀▶** button to select the desired country, then press the **ENTER** button.

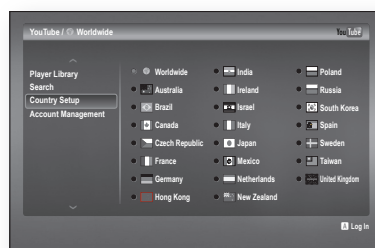


## Log in

If you have logged into your YouTube account with the Blu-ray Home Theater, you can play videos added to My Favorites.

1. Press the **RED(A)** button on the YouTube screen.
2. Press the **▲▼◀▶** button to enter the user name, then press the **YELLOW(C)** button.
3. Press the **▲▼◀▶** button to enter the password, then press the **YELLOW(C)** button.
4. Press the **◀▶** button to select **OK**, then press the **ENTER** button.

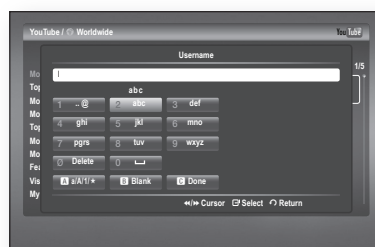

5. Enter the 4-digit numeric password.  
You can login YouTube on this Blu-ray Home Theater simply by pressing numeric buttons.

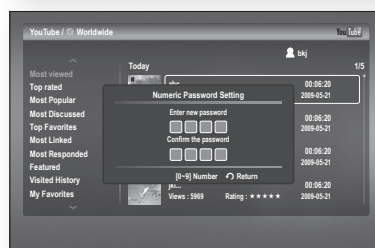


- Press the **RED(A)** button to log out of your YouTube account.

# Using the e-contents

## Playing a video

1. Press the **▲▼** button to select the desired category.

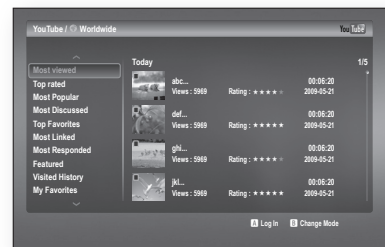


2. Select the current sorting time period (Today, Weekly, Monthly, All) by pressing the **GREEN(B)** button.



3. Press the **►** button to move to the contents list, then press the **▲▼** button to select the desired title.



4. Press the **ENTER** button.

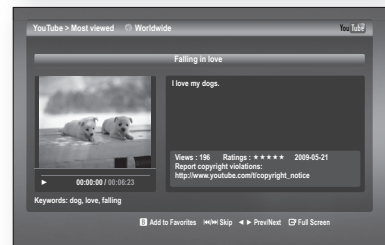


- Press the **ENTER** button to display the video in full screen during playback, and to provide related videos when it ends.
- Depending on Youtube's specifications, HD contents may not play clearly.
- Press the **EXIT** button to exit YouTube.  
During playback, **EXIT** button is not available.

## Searching a video


1. Press the **▲▼** button to select **Search**, then press the **ENTER** button.
2. Press the **◀▶** buttons to select the search criteria, then press the **ENTER** button.
  - **Relevance:** Select this if you want to search for similar videos.
  - **Published:** Select this if you want to sort videos by the created date.
  - **View count:** Select this if you want to sort videos by the view count.
  - **Rating:** Select this if you want to sort videos by the rating.
3. Press the **◀▶** buttons to select **Keyword**, then press the **ENTER** button.

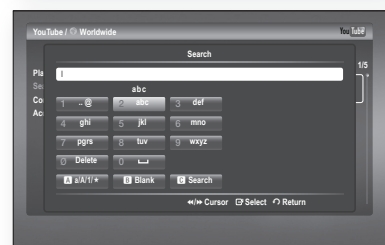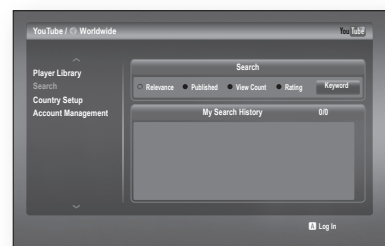


4. Press the **▲▼◀▶** button to select a text field.
5. Press the **ENTER** button in the text field repeatedly to select a desired letter, number or icon.

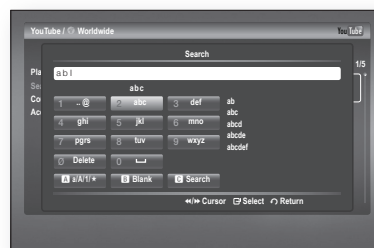

6. After you have entered in the subject you want to search, press the **YELLOW(C)** button on the remote control.

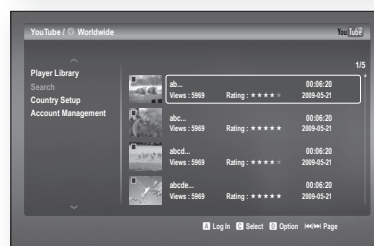

7. Press the **▲▼** buttons to select the desired video, then press **ENTER** button to play the video.

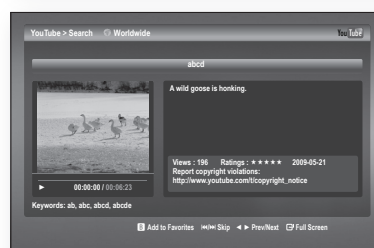


- Pressing **ENTER** button while you are in the a/A/1/★ text field enables you to change the text fields to lower case, upper case, numbers and icons.

## My Favorites

If you have logged into your YouTube account with the Blu-ray Home Theater and added a video to My Favorites, you can play the video on the Blu-ray Home Theater or a PC that is synchronized with the YouTube site.

## Saving a video

1. Press the **GREEN(B)** button during playback.  
The Storage Path popup appears
2. Press the **▲▼** button to select **My Favorites**, then press the **ENTER** button.
3. Press the **ENTER** button.  
The desired video will be added to my favorites.

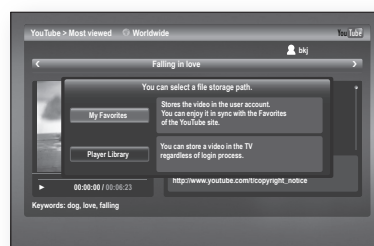

# Using the e-contents

## My Favorites

### Playing a video saved in My Favorites

1. Press the **▲▼** button to select the **My Favorites** in the category list.
2. Press the **▶** button to move to the contents list, then press the **▲▼** button to select the desired video.
3. Press the **ENTER** button.  
The selected video will be played back.




- If you have logged in your YouTube account, you can also play a video which you added to My Favorites on your PC.

## Player Library

You can add videos to the Player Library without logging into your YouTube account.

### Saving a video

1. Press the **GREEN(B)** button during the playback.
2. Press the **ENTER** button.  
The desired video will be added to player library.

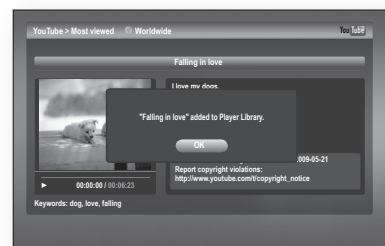

### Playing a video saved in the Player Library

1. Press the **▲▼** button to select the **Player Library** in the category list.
2. Press the **▶** button to move to the contents list, then press the **▲▼** button to select the desired video.
3. Press the **ENTER** button.  
The selected video will be played back.



# Convenient function

## SLEEP TIMER FUNCTION


You can set the time that the Blu-ray Home Theater will shut itself off.

Press the **SLEEP** button.

- Each time the button is pressed, the preset time changes as follows :  
SLP 10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.

To confirm the sleep timer setting, press the **SLEEP** button.

- The remaining time before the Blu-ray Home Theater will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

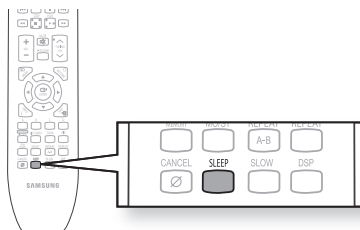


To cancel the sleep timer, press the **SLEEP** button until **OFF** appears on the display.

## ADJUSTING DISPLAY BRIGHTNESS

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press the **DIMMER** button.

- Each time the button is pressed, the brightness of front display will be adjusted.

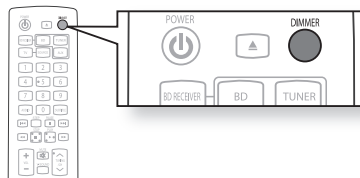


## MUTE FUNCTION

This is useful when answering a doorbell or telephone call.

Press the **MUTE** button.

- MUTE** appears in the display.
- To restore the sound, press the **MUTE** button again.

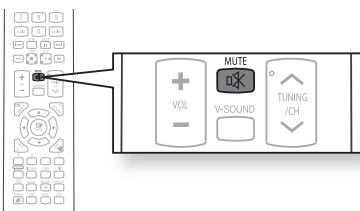

# Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact Samsung Electronics at 1-800-SAMSUNG.

SYMPTOM	Check/Remedy
I cannot eject the disc.	<ul style="list-style-type: none"> <li>• Is the power cord plugged securely into the outlet?</li> <li>• Turn off the power and then turn it back on.</li> </ul>
The iPod fails to connect.	<ul style="list-style-type: none"> <li>• Check the condition of the iPod connector and Dock.</li> <li>• Keep the iPod S/W version up to date.</li> </ul>
Playback does not start.	<ul style="list-style-type: none"> <li>• Check the region number of the BD/DVD. BD/DVD discs purchased from abroad may not be playable.</li> <li>• CD-ROMs and DVD-ROMs cannot be played on this Blu-ray Home Theater.</li> <li>• Make sure that the rating level is correct.</li> </ul>
Playback does not start immediately when the Play/Pause button is pressed.	<ul style="list-style-type: none"> <li>• Are you using a deformed disc or a disc with scratches on the surface?</li> <li>• Wipe the disc clean.</li> </ul>
Sound is not produced.	<ul style="list-style-type: none"> <li>• No sound is heard during fast playback, slow playback, and step motion playback.</li> <li>• Is the speaker setup correctly customized?</li> <li>• Is the disc severely damaged?</li> </ul>
The remote control does not work.	<ul style="list-style-type: none"> <li>• Is the remote control being operated within its operation range of angle and distance?</li> <li>• Are the batteries drained?</li> <li>• Have you selected the mode(TV/BD) functions of the remote control (TV or BD) correctly?</li> </ul>
Sound can be heard only from a few speakers and not all 3.	<ul style="list-style-type: none"> <li>• On certain BD/DVD discs, sound is output from the front speakers only.</li> <li>• Check if the speakers are connected properly.</li> <li>• Adjust the volume.</li> <li>• When listening to a CD, radio or TV, sound is output to the front speakers only.</li> </ul>
<ul style="list-style-type: none"> <li>• Disc is rotating but no picture is produced.</li> <li>• Picture quality is poor and picture is shaking.</li> </ul>	<ul style="list-style-type: none"> <li>• Is the TV power on?</li> <li>• Are the video cables connected properly?</li> <li>• Is the disc dirty or damaged?</li> <li>• A poorly manufactured disc may not be playable.</li> </ul>
Audio language and subtitles do not work.	<ul style="list-style-type: none"> <li>• Audio language and subtitles will not work if the disc does not contain them.</li> </ul>
Menu screen does not appear even when the menu function is selected.	<ul style="list-style-type: none"> <li>• Are you using a disc that does not contain menus?</li> </ul>

SYMPTOM	Check/Remedy
Aspect ratio cannot be changed.	<ul style="list-style-type: none"> <li>You can play 16:9 BD/DVDs in 16:9 Wide mode, 4:3 Letter Box mode, or 4:3 Pan - Scan mode, but 4:3 BD/DVDs can be seen in 4:3 ratio only. Refer to the Blu-ray Disc jacket and then select the appropriate function.</li> </ul>
<ul style="list-style-type: none"> <li>The main unit is not working. (Example: The power goes out or a strange noise is heard.)</li> <li>The Blu-ray Home Theater is not working normally.</li> </ul>	<ul style="list-style-type: none"> <li>Turn off the power and hold the <b>STOP</b> (■) button on the main unit for longer than 5 seconds.</li> </ul> <p>Using the RESET function will erase all stored settings. Do not use this unless necessary.</p>
The password for rating level has been forgotten.	<ul style="list-style-type: none"> <li>While (NO DISC) message appears on the display of main unit, hold the main unit's <b>STOP</b> (■) button for longer than 5 seconds. <b>INITIAL</b> appears on the display and all settings will return to the default values.</li> <li>Press the <b>POWER</b> button.</li> </ul> <p>Using the RESET function will erase all stored settings. Do not use this unless necessary.</p>
Can't receive radio broadcasts.	<ul style="list-style-type: none"> <li>Is the antenna connected properly?</li> <li>If the antenna's input signal is weak, install an external FM antenna in an area with good reception.</li> </ul>
While listening to TV audio through the Blu-ray Home Theater, no sound is heard.	<ul style="list-style-type: none"> <li>If the <b>OPEN/CLOSE</b> (▲) button is pressed while listening to TV audio using the D.IN or AUX functions, the BD/DVD functions are turned on and this mutes the TV audio.</li> </ul>
The Ⓞ icon appears on screen.	<ul style="list-style-type: none"> <li>The features or action cannot be completed at this time because:               <ol style="list-style-type: none"> <li>The BD/DVD's software restricts it.</li> <li>The BD/DVD's software doesn't support the feature (e.g., angles)</li> <li>The feature is not available at the moment.</li> <li>You've requested a title or chapter number or search time that is out of range.</li> </ol> </li> </ul>
If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.	<ul style="list-style-type: none"> <li>Press the <b>STOP</b> (■) button (in front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.</li> </ul>
No HDMI output.	<ul style="list-style-type: none"> <li>Check the connection between the TV and the HDMI jack of the Blu-ray Home Theater.</li> <li>Check if your TV supports 480p/720p/1080i/1080p HDMI input resolution.</li> </ul>
Abnormal HDMI output screen.	<ul style="list-style-type: none"> <li>If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).</li> </ul>
Cannot search for other access points using USB wireless	<ul style="list-style-type: none"> <li>Check the Proxy is Off(Setup -&gt; Network -&gt; Proxy)</li> </ul>

# Appendix

## CAUTIONS ON HANDLING AND STORING DISCS

Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them.




### Handling discs

Do not touch the playback side of the disc.

Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.

### Disc Storage

Do not keep in direct sunlight	Keep in a cool ventilated area	Keep in a clean Protection jacket. Store vertically.
		



- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

### Handling and Storing Discs

When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc



- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.



## SPECIFICATIONS

General	Power Requirements	AC 120V, 60Hz	
	Power Consumption	70 W	
	Weight	12.3 lbs	
	Dimensions (W x H x D)	without the moving door : 39.4 x 7.7 x 1.9 inches with the moving door : 39.4 x 7.7 x 2.8 inches	
	Operating Temperature Range	+41°F to +95°F	
	Operating Humidity Range	10 % to 75 %	
FM Tuner	Signal / noise ratio	70 dB	
	Usable sensitivity	10 dB	
	Total harmonic distortion	0.5 %	
Disc	BD (Blu-ray Disc)	Reading Speed : 4.917m/sec	
	DVD (Digital Versatile Disc)	Reading Speed : 3.49 ~ 4.06 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.	
	CD : 5 inches (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min.	
	CD : 3 1/2 inches (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 20 min.	
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)	
		Blu-ray Disc : 480i	DVD : 480i
Video/Audio	HDMI	1080p, 1080i, 720p, 480p	
		PCM multichannel audio, Bitstream audio, PCM audio	
Amplifier	Main unit output	100W/CH, 3Ω, THD=10%, 1KHz	
	Subwoofer speaker output	100W/CH, 3Ω, THD = 10%, 120Hz	
	Frequency response	Analog input	20Hz~20kHz (±3dB)
		Digital input/48kHz PCM	20Hz~44kHz (±3dB) ... based on TV
	S/N Ratio	70dB	
	Channel separation	60dB	
Subwoofer	Input sensitivity	400mV	
	Power Consumption	35 W	
	Impedance	47KΩ	
	Frequency range	140Hz~20kHz	
	Output sound pressure level	88dB/W/M	
	Dimensions (W x H x D)	11.4 x 14.6 x 11.6 inches	
	Weights	16.1 lbs	

\*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

# WARRANTY

---

## LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

### **One (1) Year Parts and Labor\***

#### **(\*90 Days Parts and Labor for Commercial Use)**

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation of the product to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

SAMSUNG's obligations with respect to software products distributed by SAMSUNG under the SAMSUNG brand name are set forth in the applicable end user license agreement. Non-SAMSUNG hardware and software products, if provided, are on an "AS IS" basis. Non-SAMSUNG manufacturers, suppliers, publishers, and service providers may provide their own warranties.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal or reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty hardware service, please contact SAMSUNG at:

Samsung Electronics America, Inc.  
105 Challenger Road Ridgefield Park, NJ 07660-0511  
1-800-SAMSUNG (726-7864) and [www.samsung.com/us](http://www.samsung.com/us)

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Country	Customer Care Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
Europe	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	02 201 2418	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
	CZECH REPUBLIC	800-SAMSUNG(800-726786)	www.samsung.com/cz
	DENMARK	8-SAMSUNG(7267864)	www.samsung.com/dk
	FINLAND	30-6227 515	www.samsung.com/fi
	FRANCE	01 4863 0000	www.samsung.com/fr
	GERMANY	01805 - SAMSUNG(726-7864 € 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEBURG	02 261 03 710	www.samsung.com/lu
	NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	3-SAMSUNG(7267864)	www.samsung.com/no
	POLAND	0 801 1SAMSUNG(172678), 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	SWEDEN	075-SAMSUNG(726 78 64)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0810-SAMSUNG(7267864, € 0.07/min)	www.samsung.com/at
	SWITZERLAND	0848-SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch
CIS	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.com/lt
	LATVIA	8000-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.com/ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	800-810-5858, 400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282, 1800 110011, 1-800-3000-8282	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864), 02-5805777	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
Middle East & Africa	TURKEY	444 77 11	www.samsung.com/tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864 )	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae



## QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT	WRITE
IN THE US	1-800-SAMSUNG (7267864)	<a href="http://www.samsung.com/us">www.samsung.com/us</a>	Samsung Electronics America, Inc. 105 Challenger Road Ridgefield Park, NJ 07660-0511



Code No. AH68-02244R